


Repair / replacement

To replace a damaged strip, make several cuts with the cutter, heat with a hair dryer to soften the sections, then remove the pieces of damaged strip.

If any strips become loose due to excess humidity in certain parts of the room, use Tarkospray glue or a similar glue to re-glue the strip after having eliminated the source of humidity and ensured that the damp section is completely dry.

Suggestions for fitting

Below are a few suggestions for laying Starfloor that may help to enhance the appearance of your room.

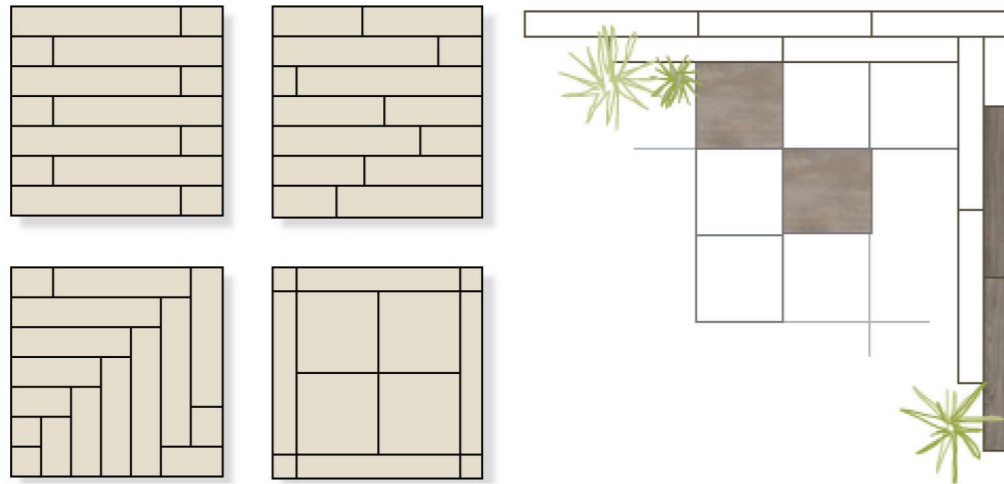

For further information, please contact your local sales office

■ **WESTERN EUROPE:** Austria: Tarkett Holding GmbH, Niederlassung Wien - Tel. +43 1 47 88 062 ■ **Belgium:** Tarkett France Belux - Tel. +32 16 35 98 80 ■ **Denmark:** Tarkett A/S - Tel. +45 43 90 60 11 ■ **Finland:** Tarkett Oy - Tel. +358 9 4257 9000 ■ **France:** Tarkett SAS - Tel. +33 1 41 20 42 49 ■ **Germany:** Tarkett Holding GmbH, Bereich Objekt - Tel. +49 62 33 810 ■ **Greece:** Tarkett Monoprosopi Ltd - Tel. +30 210 6745 340 ■ **Italy:** Tarkett S.p.A. - Tel. +39 0744 7551 ■ **Luxembourg:** Tarkett GDL SA - Tel. +352 949 211 8804 ■ **Netherlands:** Tarkett Holding GmbH, Vestiging Nederland - Tel. +31 416 685 491 ■ **Norway:** Tarkett AS - Tel. +47 32 20 92 00 ■ **Portugal:** Tarkett SA - Tel. +351 21 427 64 20 ■ **Spain:** Tarkett Floors S.L - Tel. +34 91 358 00 35 ■ **Sweden:** Tarkett Sverige AB - Tel. +46 771 25 19 00 ■ **Switzerland:** Tarkett Holding GmbH, Bereich Objekt Schweiz - Tel. +41 043 233 79 24 ■ **Turkey:** Tarkett Aspen - Tel. +90 212 213 65 80 ■ **United Kingdom:** Tarkett Ltd - Tel. +44 (0) 1622 854 040 ■ **EASTERN EUROPE:** Baltic Countries: Tarkett Baltics: Tel. +370 37 262 220 ■ **Czech Republic:** Tarkett France SAS, org. slozka - Tel. +420-271 001 602 ■ **Hungary:** Tarkett France SAS - Tel. +36 1 437 8150 ■ **Poland:** Tarkett Polska Sp. z o. o. - Tel. +48 22 16 09 231 ■ **Russian Federation:** ZAO Tarkett RUS - Tel. +7 495 775 3737 ■ **Slovakia:** Tarkett France SAS, org. slozka - Tel. +421 248 291 317 ■ **South East Europe:** Tarkett Trade d.o.o. - Tel. +381 21 7557 649 (44) 569 12 21 ■ **Ukraine:** Tarkett UA - Tel. +38 (0) 44 569 12 21 ■ **ASIA AND OCEANIA:** Australia: Tarkett Australia Pty Ltd - Tel. +61 2 88 53 12 00 ■ **China:** Tarkett Floor Covering (Shanghai) Co. Ltd. - Tel. +86 (21) 60 95 68 38 ext 841 ■ **North East Asia:** Tarkett Hong Kong Limited - Tel. +852 2511 8716 ■ **India:** Tarkett France (India Branch) - Tel. +91 11 4352 4073 ■ **South East Asia:** Tarkett Flooring Singapore Pte. Ltd. - Tel. +65 6346 1585 ■ **AFRICA:** Tarkett International: Tel. +33 1 41 20 41 01 ■ **MIDDLE EAST:** Tarkett Middle East: Tel. +961 1 51 3363/4 ■ **Israel:** Tarkett International: Tel. +33 1 41 20 41 01 ■ **NORTH AMERICA:** USA: Tarkett Inc. - Tel. +1 713 869 5811 / Johnsonite - Tel. +1 440 543 8916 ■ **Canada:** Tarkett Inc. - Tel. +1 450 293 173 ■ **LATIN AMERICA:** Brazil: Tarkett - Tel. 55 12 3954 7108 ■ **Argentina - Chile - Uruguay:** Tarkett Latam Mercosur - Tel. +54 11 47 08 07 72 / +54 9 11 44 46 88 82 ■ **Bolivia - Colombia - Ecuador - Panama - Paraguay - Peru - Trinidad and Tobago - Venezuela:** Tarkett - Tel. +55 11 9 8410 9310 / +55 11 95494 0069 ■ **Mexico / Central America:** Tarkett Latam Mexico - Tel. +55 11 98410 9310

09/2016



www.tarkett.com



THE ULTIMATE FLOORING EXPERIENCE

Usage

- Floor covering exclusively for interior residential use (bedroom, kitchen, living room, utility room, corridor).
- Product compatible with underfloor heating systems (nb.: switch off heating at least 24hr before installation).
- Floor temperature must not exceed 27°C. Room temperature must not fall below 10°C.
- Product not compatible in area where extreme fluctuation in the indoor climate is possible (veranda, winter garden...).

Preparation

- Recommended equipment: tape measure, ruler, cutter and pencil or chalk.
- Store the strips flat with veneer side upwards 24hr prior to installation (min.15°C).
- Very rough floors must be finished (mortar and/or levelling compound). It is strongly recommended to apply an adapted primer emulsion to finished floors.
- For slightly irregular sub floors (e.g. wood or laminate parquet flooring glued to the floor, concrete screed, close-fitting tiled surface), use a levelling compound or a specific coating to obtain a smooth fitting surface.
- Before installation, the surface beneath must be clean, hard, smooth, dry and free of cracks (remove dust and all marks of grease, wax, plaster, paint, etc.).



Equipment



Sub floor surface hard, smooth, dry and free of cracks.

Installation

1. Using a pencil or chalk line, draw perpendicular lines starting at the centre of the floor in order to divide it into 4 identical sections.
2. Begin installing the system at the centre of the room. The strips should be the same width along the walls on either side of the room.
3. Remove the protective paper, position the strip and press from the centre towards the edges.
4. To fit the last strips to the edge of the wall, make cut-outs using 2 strips (A and B). Place strip A with its protective paper onto the last fitted and glued strip. Next, place strip B against the wall so that it partially overlaps strip A and completely covers the bare area of floor remaining. Use this strip B as a ruler to mark strip A. Cut strip A along the drawn line and place it against the wall.




1



2



3

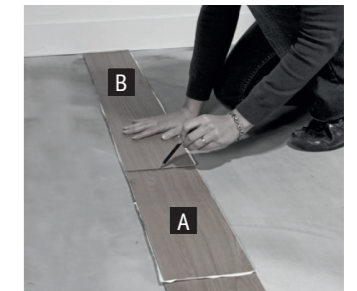

4

When installation is complete, it is normal to see glue rising through the joints. This ensures a perfect join between the strips. This excess glue may be removed with a cloth soaked in a neutral detergent.

Installation on existing sub floor

INSTALLATION ON EXISTING FLOORING:

■ PVC / linoleum coverings

- Starfloor should not be installed directly onto PVC covering, PVC flooring should be removed.
- Starfloor may be installed directly onto linoleum.

It is strongly recommended to apply an adapted primer emulsion to the linoleum prior to the installation.

■ Textile coverings

- Starfloor is incompatible with carpet and other textile coverings (these must be removed before installation)

■ Glued parquet and laminate flooring

- Starfloor may be laid directly onto glued laminate or parquet flooring (mosaic, woodblock, etc.) where there are no joints. An adapted primer emulsion should be used in order to improve adhesion of Starfloor.

■ Floating parquet and laminate flooring

- Floating flooring should be removed prior to Starfloor installation.

■ Tiled flooring and concrete screed

- Starfloor may be fitted to smooth tiled surfaces without joints.
- Starfloor may be fitted to tiled surfaces with joints after the floor surface has been smoothed with a levelling compound.
- Starfloor may be fitted to a smooth concrete screed.
- If the concrete screed is uneven, it must be smoothed off with a levelling compound. For each case, an primary coat should be used in order to improve adhesion of Starfloor.

Maintenance



- Weekly maintenance.
- Using a vacuum cleaner or damp floor cloth (water + non-abrasive detergent).
- Do not soak the floor.
- Do not use polish or varnish.
- Do not use chlorinated solvents, soft soap, linseed oil-based products or acetone.
- Replace any rubber feet of furniture with plastic or felt feet.
- Treatment of resistant stain:
 - Alcohol, rubber, petrol, grease: rub with detergent and rinse
 - Paint, tar: rub with alcohol (e.g. white spirit) and rinse
 - Tomato, mustard, ink, blood: use diluted bleach or white vinegar and rinse
 - Rust: clean with a rust removal product or oxalic acid and rinse.