


LUXURY  
VINYL  
TILES

# 2017 FLOORING RECIPES



THE ULTIMATE  
FLOORING EXPERIENCE

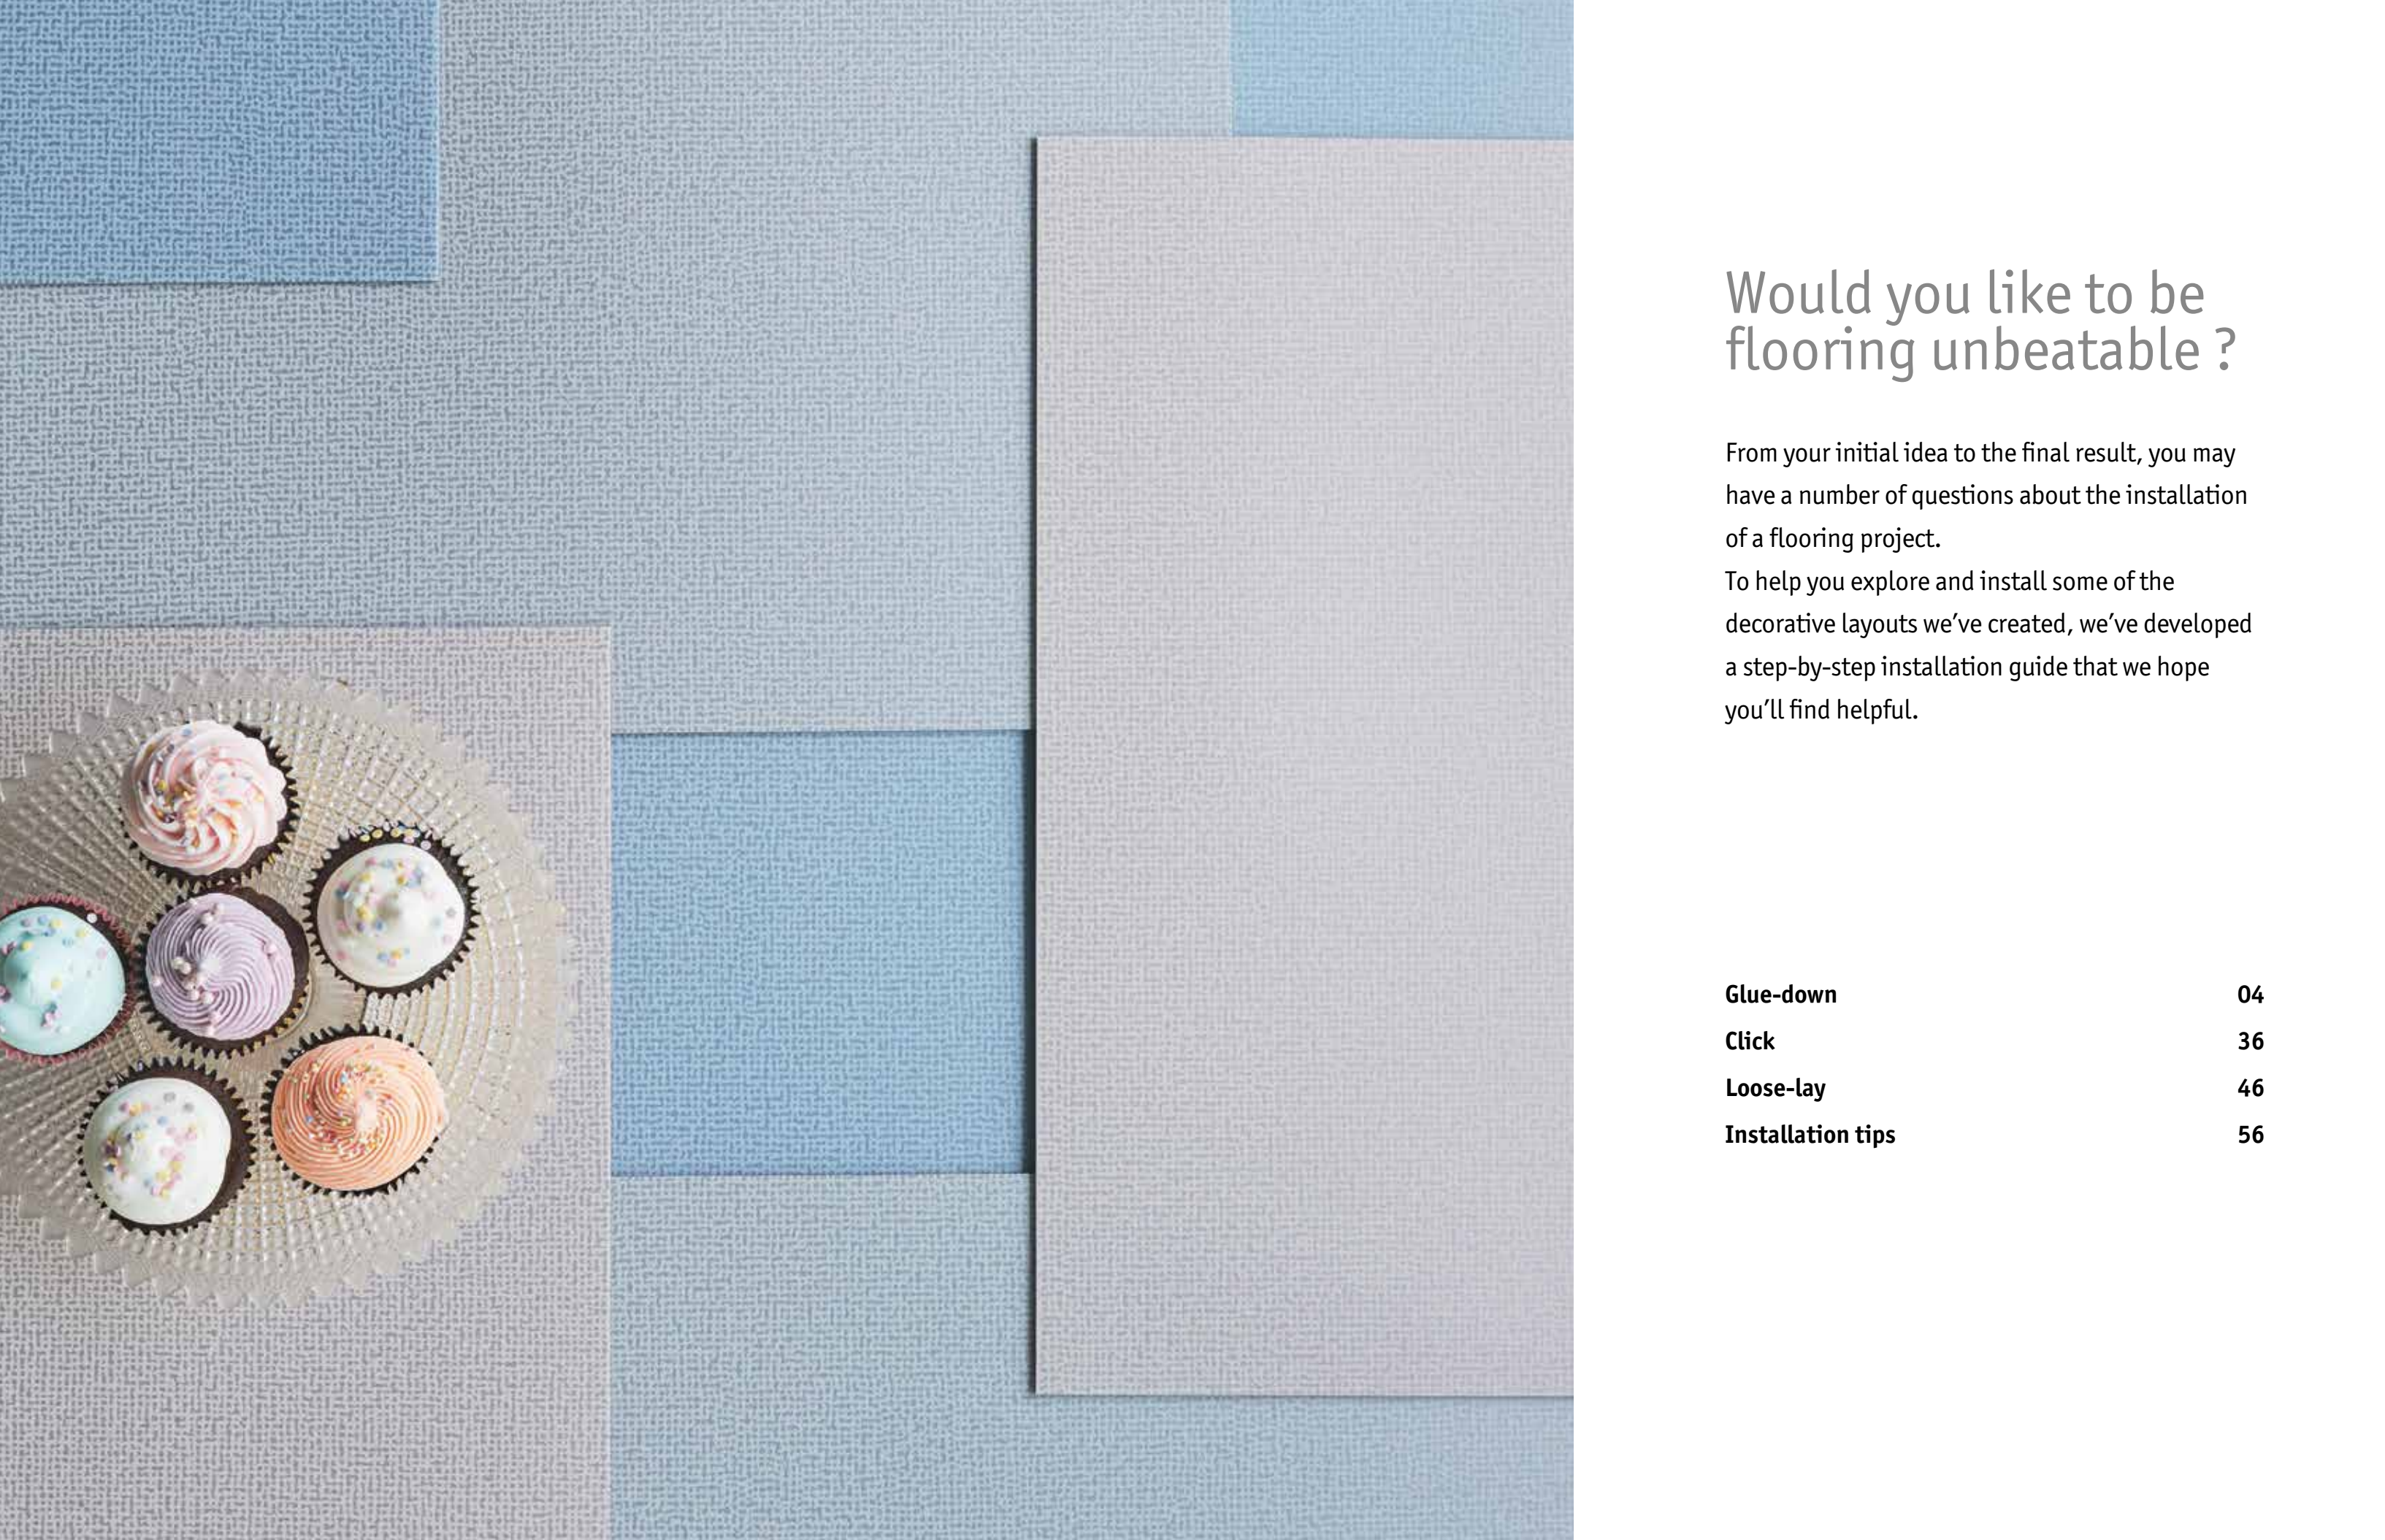

## Would you like to be flooring unbeatable ?

From your initial idea to the final result, you may have a number of questions about the installation of a flooring project.

To help you explore and install some of the decorative layouts we've created, we've developed a step-by-step installation guide that we hope you'll find helpful.

<b>Glue-down</b>	<b>04</b>
<b>Click</b>	<b>36</b>
<b>Loose-lay</b>	<b>46</b>
<b>Installation tips</b>	<b>56</b>

┌  
glue-down  
└






# RANDOM CHECKERBOARD

**NEW**


Room type:  
Square  
49 m<sup>2</sup>  
Size:  
7m x 7m

## COLLECTION: iD INSPIRATION 55-70

- Metal Frame Rose  
24207 078 - 50 x 50 cm - nb. of boxes: 5
- Metal Frame Platinum  
24207 079 - 50 x 50 cm - nb. of boxes: 5
- Metal Frame Aluminium  
24207 080 - 50 x 50 cm - nb. of boxes: 5

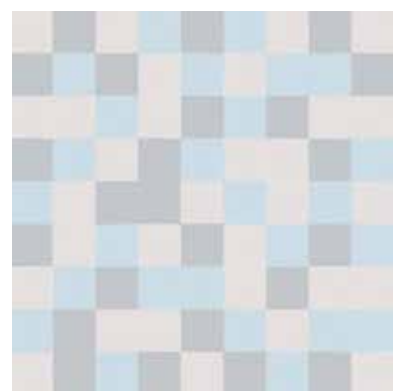


## STEP-BY-STEP INSTALLATION

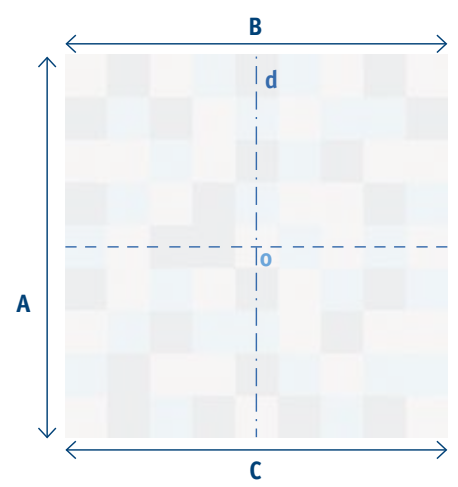


### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

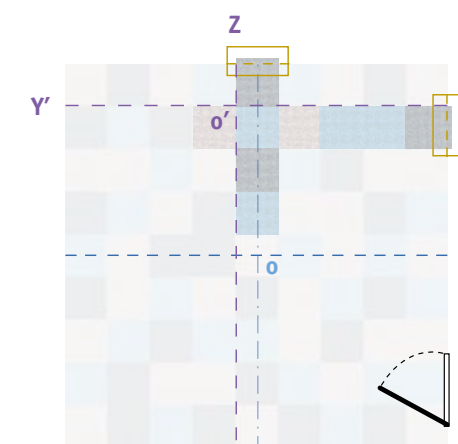

### 2. Define the layout

- Create the layout with a plank covering the line "Z" and "Y" as reference and starting from the point "o" ["Y" is shifted about half a plank length.]
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

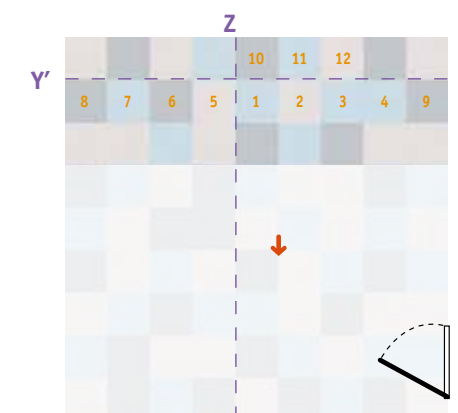

### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
  - Start from the shifted axes "Y" and "Z"
  - Spread adhesive on an adapted area of the installation and after maximum 5 minutes of drying time, lay down the tiles.
  - When a complete tile cannot be installed, use the scribing method
  - Use a cork press to ensure bonding
- Follow this method and install planks backward until you reach the door "↓"

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




**NEW**

**GRADIENCE**


Room type:  
Rectangular  
112 m<sup>2</sup>  
Size:  
8m x 14m

**STEP-BY-STEP INSTALLATION**

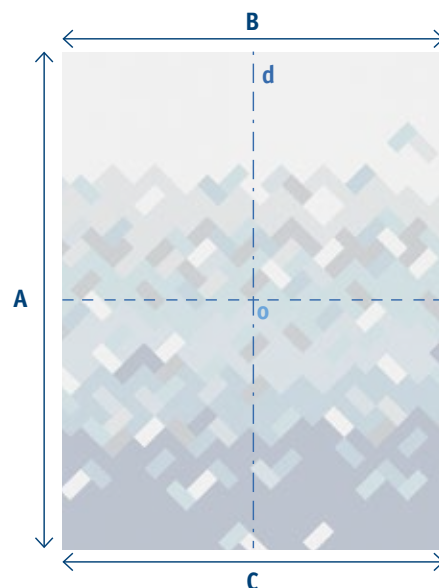


**1. Define axes of the room**

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

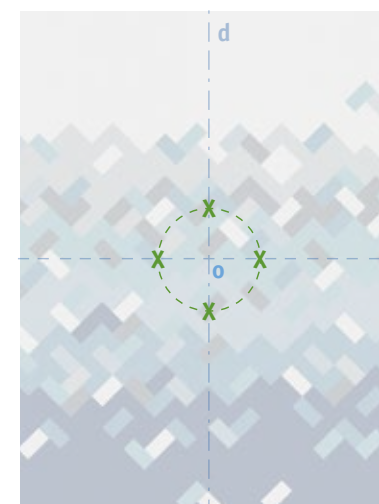


**2. Define diagonal axes**

- Create the diagonals by using a compass with a circle from the central point creating the 4 junctions "X" with axes

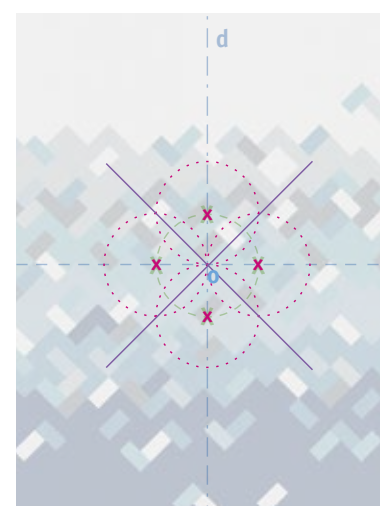

**3. Define diagonal axes**

- Draw a circle from the central point:
  - create the 4 junctions "X" with axes
  - draw 4 circles from those junctions
- The diagonals cross all the intersections of the circles

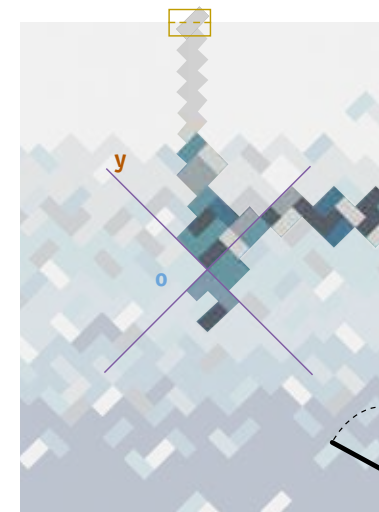


**4. Define the layout**

- From the diagonals, start installation of the first tile
- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

**Note:** in this installation, remember to take into account the black border when you check dimensions of planks close to the walls.  
**Tip:** cut tiles in diagonal to prepare the borders.

**COLLECTION: iD INSPIRATION 55-70**

- Twine Light Grey: 24206 038 - 25 x 50 cm - nb. of boxes: 8
- Twine Medium Grey: 24206 039 - 25 x 50 cm - nb. of boxes: 5
- Twine Dark Gre: 24206 040 - 25 x 50 cm - nb. of boxes: 5
- Twine Blue Grey: 24206 041 - 25 x 50 cm - nb. of boxes: 5
- Twine Turquoise: 24206 042 - 25 x 50 cm - nb. of boxes: 5
- Twine Denim: 24206 043 - 25 x 50 cm - nb. of boxes: 5
- Twine Indigo: 24206 044 - 25 x 50 cm - nb. of boxes: 8

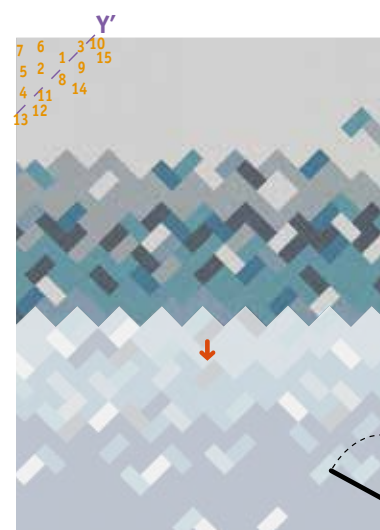


**5. Start gluing**

- Since your layout is planned, you can now define the area for gluing:
  - Start from the shifted axes "Y"
  - When a complete tile cannot be installed, use the scribing method
  - Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the tiles
  - Use a cork press to ensure bonding

- Follow this method and install planks backward until you reach the door "↓"

**Note:** install the border last and scribe it to join perfectly the tiles

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](http://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.

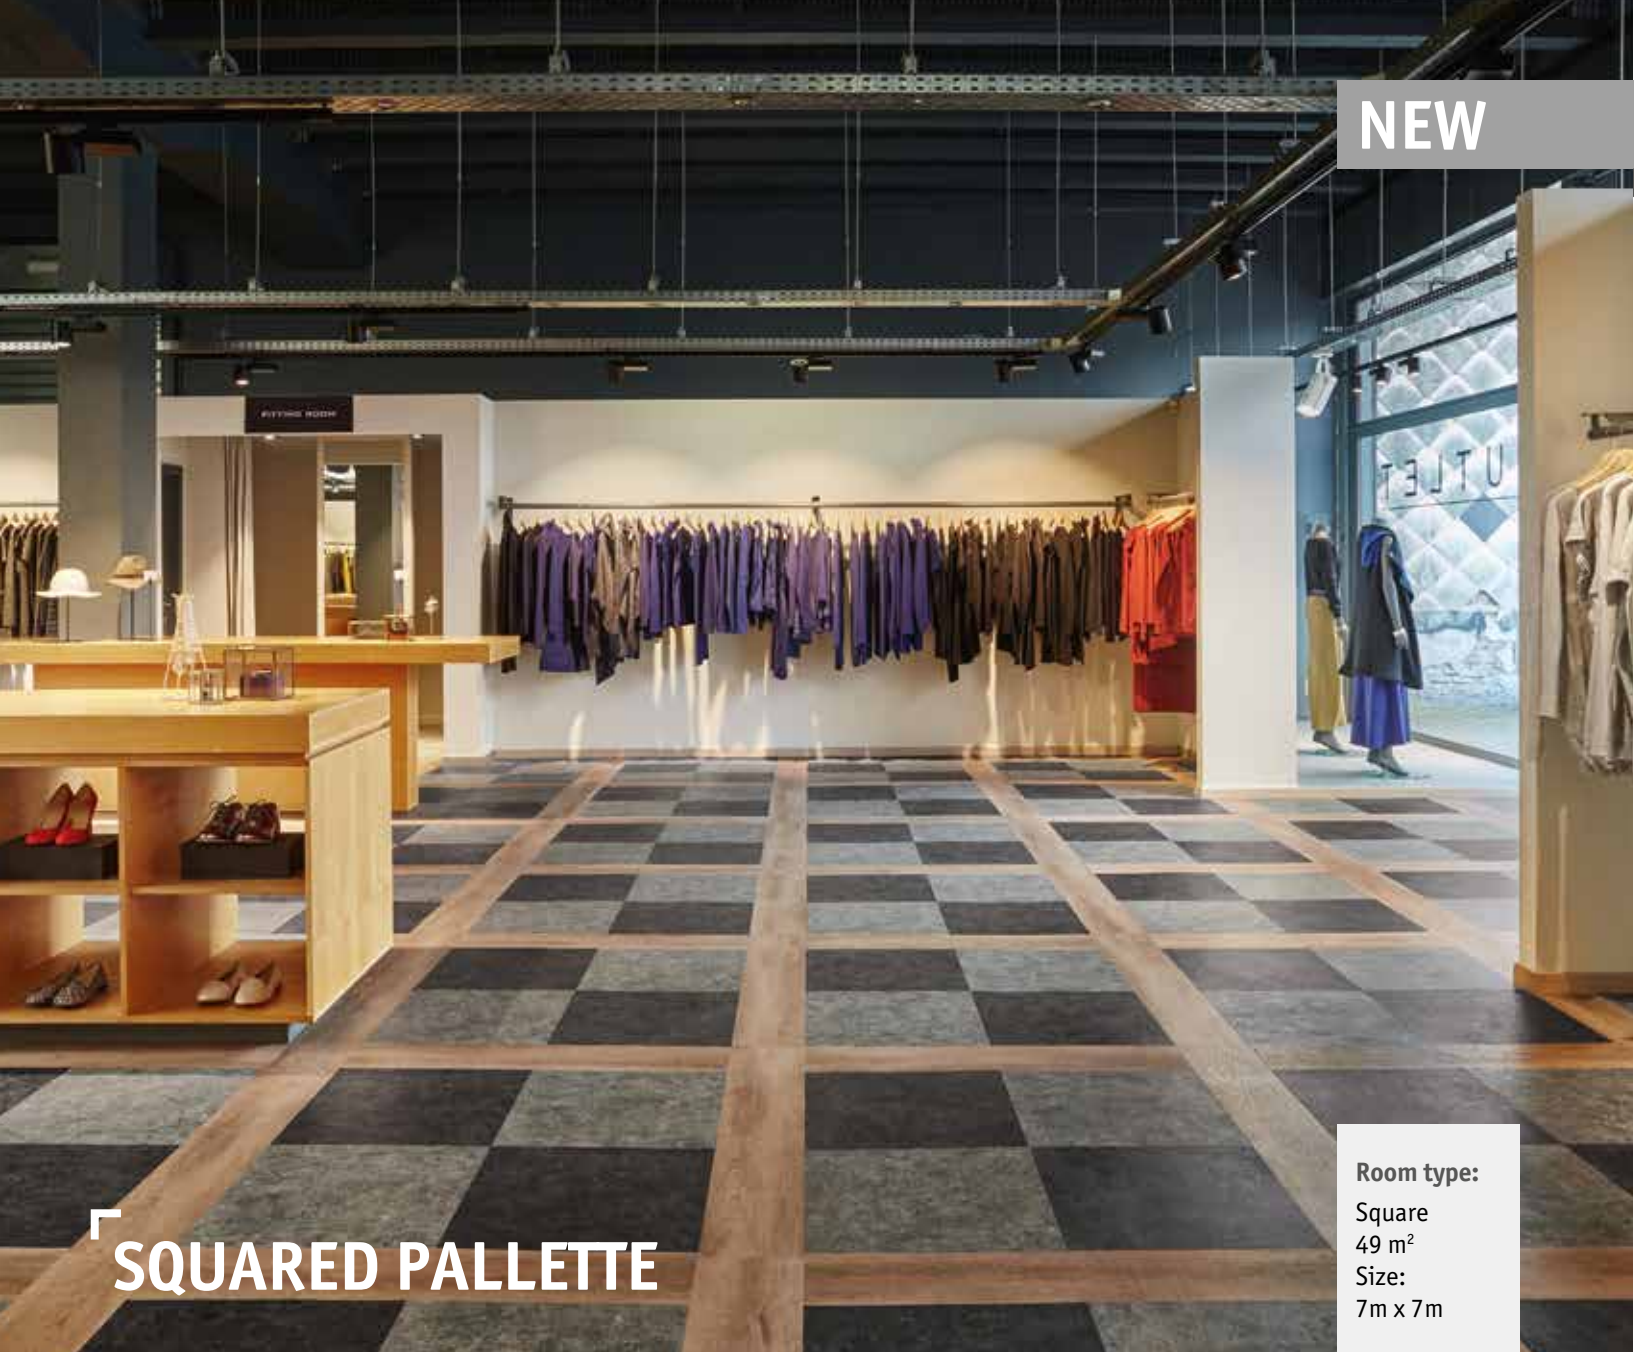


**NEW**

# SQUARED PALLETTE


Room type:  
Square  
49 m<sup>2</sup>  
Size:  
7m x 7m

## STEP-BY-STEP INSTALLATION

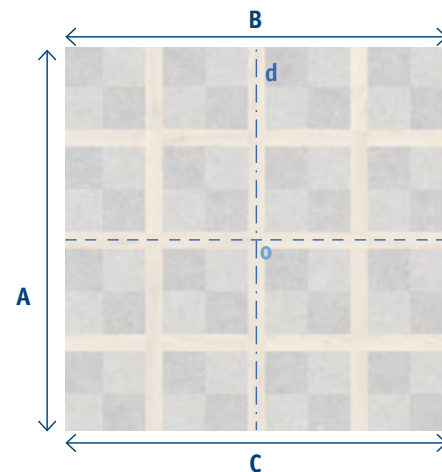

### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

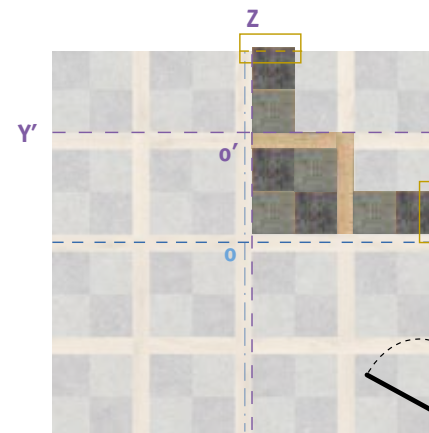


### 2. Define the layout

- Create the layout with a plank covering the line "Z" and "Y'" as reference and starting from the point "o" ["Y'" is shifted about half a plank length.]
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

## COLLECTION: iD INSPIRATION 55-70

- Antik Oak Beige  
24201 001 - 20 x 122 cm - nb. of boxes: 2
- Terrazzo Green  
24207 130 - 50 x 50 cm - nb. of boxes: 3
- Terrazzo Anthracite  
24207 131 - 50 x 50 cm - nb. of boxes: 3

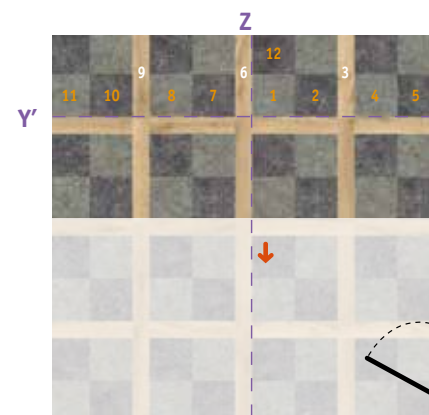

### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
  - Start from the shifted axes "Y'" and "Z"
  - Spread adhesive on an adapted area of the installation and after maximum 5 minutes of drying time, lay down the tiles.
  - When a complete tile cannot be installed, use the scribing method
  - Use a cork press to ensure bonding
- Follow this method and install planks backward until you reach the door "↓"

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




**NEW**

**GIANT PATH**


Room type:  
Square  
36 m<sup>2</sup>  
Size:  
6m x 6m

**STEP-BY-STEP INSTALLATION**

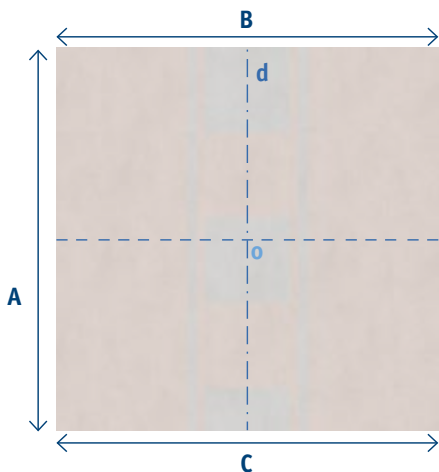

**1. Define axes of the room**

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

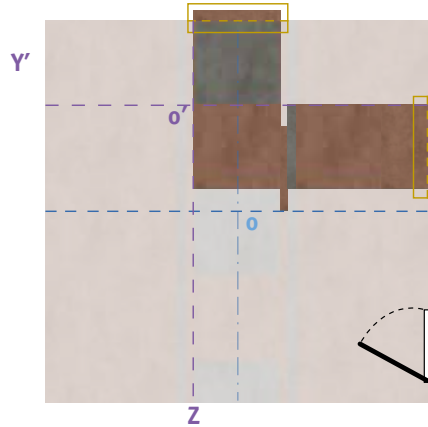


**2. Define the layout**

- Create the layout with a plank covering the line "Z" and "Y'" as reference and starting from the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

**COLLECTION: iD INSPIRATION 55-70**

- Oxide Copper  
24209 118 - 100 x 100 cm - nb. of boxes: 6
- Oxide Black Steel  
24209 120 - 100 x 100 cm - nb. of boxes: 1

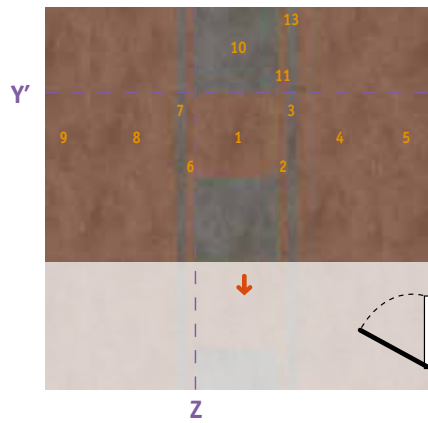

**3. Start gluing**

- Since your layout is planned, you can now define the area for gluing
- Start from the shifted axes "Y'" and "Z"
- Spread adhesive on an adapted area of the installation and after maximum 5 minutes of drying time, lay down the tiles
- When a complete tile cannot be installed, use the scribing method
- Use a cork press to ensure bonding
- Follow this method and install planks backward until you reach the door "↓"

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




NEW

# VINTAGE HERRINGBONE

Room type:  
Square  
64 m<sup>2</sup>  
Size:  
8m x 8m

## STEP-BY-STEP INSTALLATION

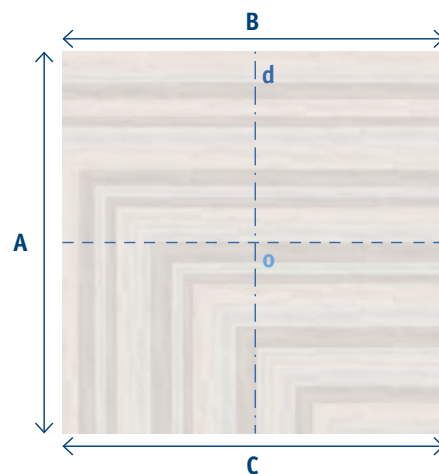


### 1. Define axes of the room

■ Measure the size of the room (**A**, **B** and **C**) when the room is square enough to define the axes and centre point


■ The line "d" goes through the middle of **B** and **C**

■ The central point "o" is found where line "d" crosses the midpoint of **A**

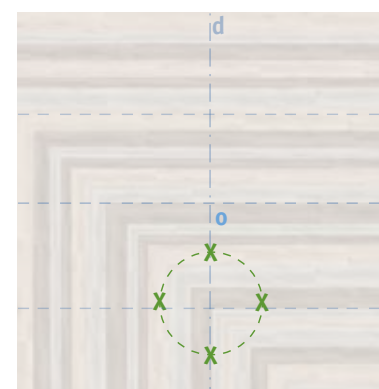

### 2. Define diagonal axes


■ Create the diagonals by using a compass with a circle from the central point creating the 4 junctions "X" with axes

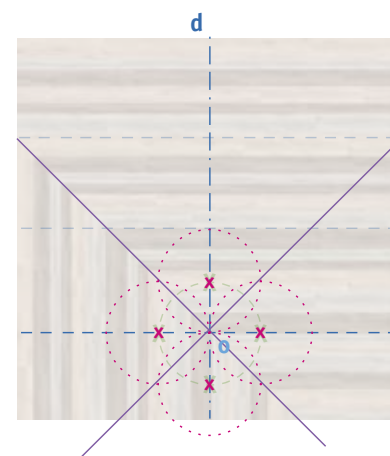

### 3. Define diagonal axes

■ Drawing a circle from the central point:  
- create the 4 junctions "X" with axes  
- draw 4 circles from those junctions

■ The diagonals cross all the intersections of the circles

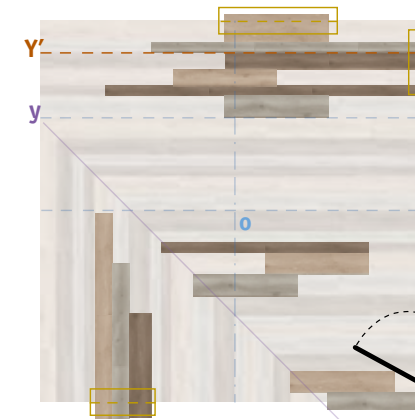

### 4. Define the layout


■ Create the layout with a plank covering the line "y" as reference and starting from the point "o"

■ Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "y''"

■ Define shifted axe "Y'" 3 or 4 lines away from the wall to start installation

## COLLECTION: iD INSPIRATION 55-70

- Contemporary Oak Grey**  
 24200 109 - 12,5 x 122 cm - nb. of boxes: 2  
 24201 109 - 20 x 122 cm - nb. of boxes: 2  
 24202 109 - 25 x 122 cm - nb. of boxes: 2
- Contemporary Oak Grege**  
 24200 110 - 12,5 x 122 cm - nb. of boxes: 2  
 24201 110 - 20 x 122 cm - nb. of boxes: 2  
 24202 110 - 25 x 122 cm - nb. of boxes: 2
- Contemporary Oak Brown**  
 24200 112 - 12,5 x 122 cm - nb. of boxes: 2  
 24201 112 - 20 x 122 cm - nb. of boxes: 2  
 24202 112 - 25 x 122 cm - nb. of boxes: 2

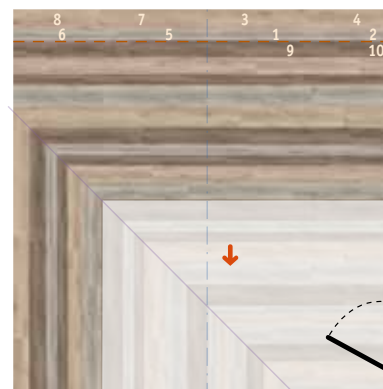

### 5. Start gluing

■ Since your layout is planned, you can now define the area for gluing:  
 - Shift the starting line to plank the closest to the wall on the opposite side of the door  
 - Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks (Use the example of the planks "1" to "6" that are to be installed in that order)  
 - Use a cork press to ensure bonding  
 - Install only full planks

■ Follow this method and install planks backward until you reach the door "↓"

### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.






**TIMELESS**

**WOOD GALLERY**


Room type:  
Rectangular  
12 m<sup>2</sup>  
Size: 2m x 6m

**STEP-BY-STEP INSTALLATION**

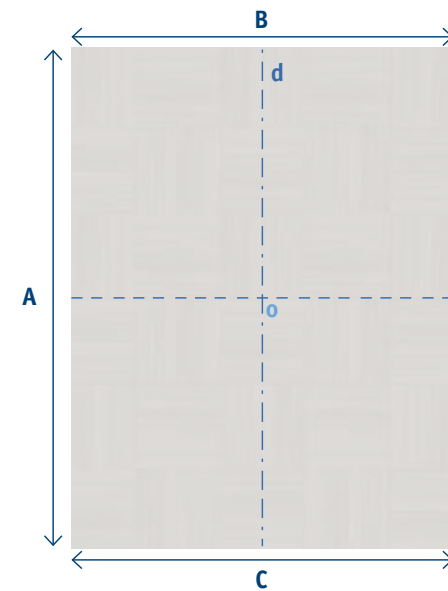

**1. Define axes of the room**

- Measure the size of the room (**A**, **B** and **C**) when the room is rectangle enough to define the axes and centre point
- The line “**d**” goes through the middle of **B** and **C**
- The central point “**o**” is found where line “**d**” crosses the midpoint of **A**

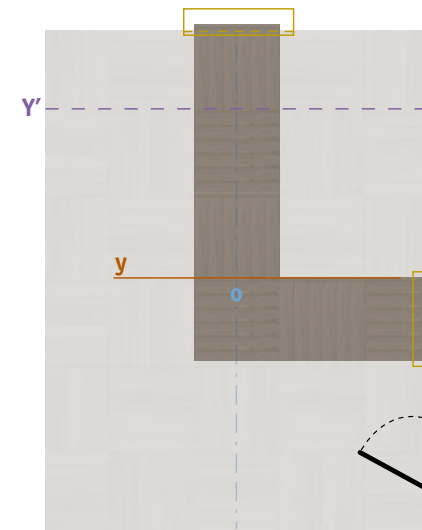


**2. Define the layout**

- Create the layout with a plank covering the line “**y**” as reference and starting from the point “**o**”
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result “”
- Define shifted axis “**Y**” 3 or 4 plank widths away from the wall to start installation

**Note:** Keep in mind that width of feature strips needs to be taken into account for the layout definition.

**COLLECTION: iD INSPIRATION 55-70**

Wenge Grege  
24205 012 - 16.66 x 100 cm - nb.of boxes: 4

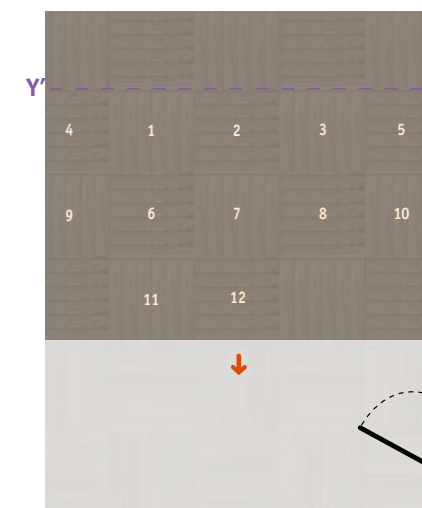

**3. Start gluing**

- Since your layout is planned, you can now define the area for gluing
  - Start from the shifted axis “**Y**”
  - Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks (Use the example of the group of planks “**1**” to “**12**” that are to be installed in that order)
  - Use a cork press to ensure bonding
  - Install only full planks

■ Follow this method and install planks backward until you reach the door “”

Tip: install the last rows (up and down) last to walk on LVT where adhesive is already dry.

**Last steps to complete your project**

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




TIMELESS

OLD TOWNHOUSE


Room type:  
Rectangular  
120 m<sup>2</sup>  
Size:  
10m x 12m

STEP-BY-STEP INSTALLATION

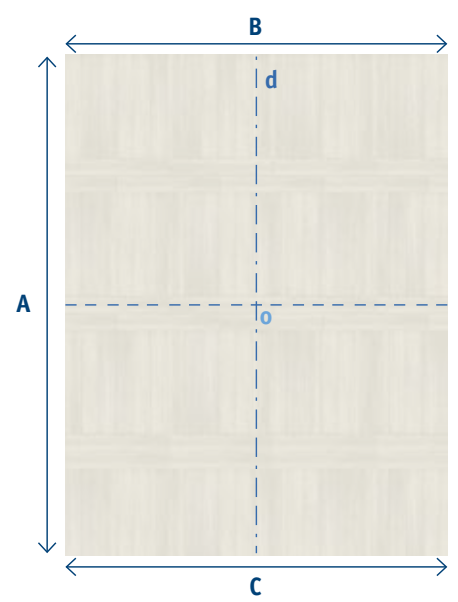

1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

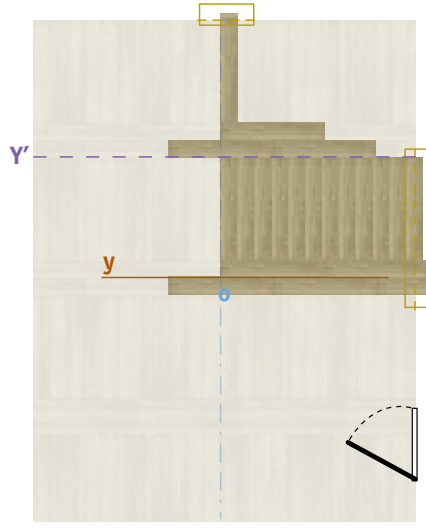

2. Define the layout

- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
  - Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
  - Define shifted axis "Y" 3 or 4 plank widths away from the wall to start installation
- Note: Keep in mind that width of feature strips needs to be taken into account for the layout definition.


COLLECTION: iD INSPIRATION 55-70

- Brushed Pine Natural  
24201 015 - 20 x 122 cm - nb. of boxes: 35
- Dark Grey Feature Strip  
1421 009 - 1 linear meter long - 50 units of 1 lm/box: 50 lm



3. Start gluing

- Since your layout is planned, you can now define the area for gluing
- Start from the shifted axis "Y"
- Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks (Use the example of the planks "1" to "10" that are to be installed in that order)
- Use a cork press to ensure bonding
- Between each line of planks, add a line of Dark Grey feature strip
- Install only full planks

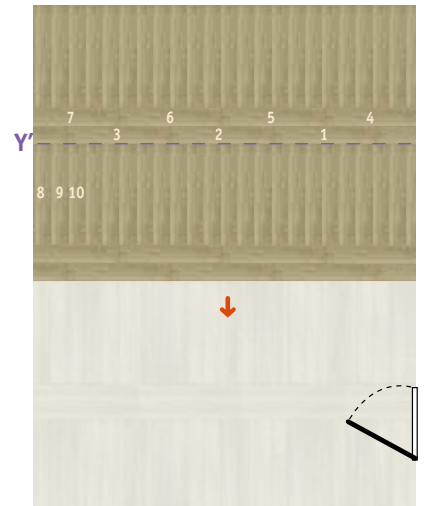

- Follow this method and install planks backward until you reach the door "↓"
- Tip: install the last rows (up and down) last to walk on LVT where adhesive is already dry.

Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

Note: Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: professionals.tarkett.com/content/list-recommended-adhesives). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




# TIMELESS

## SIMPLE STEP


Room type:  
Rectangular  
24 m<sup>2</sup>  
Size: 3m x 8m

### STEP-BY-STEP INSTALLATION

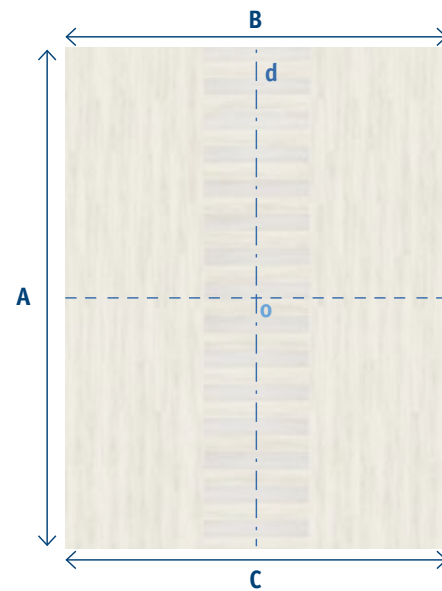

#### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

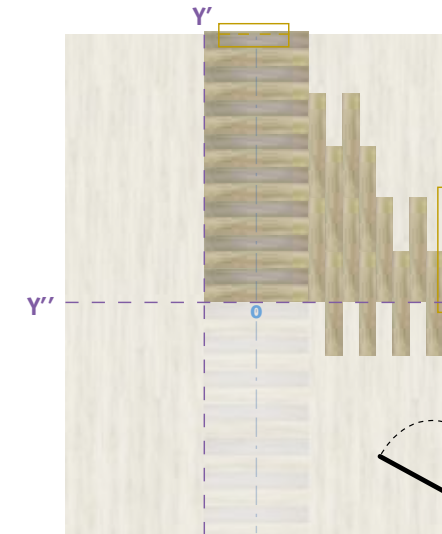


#### 2. Define the layout

- Create the layout with a plank covering the axe "Y'" as reference and centered on the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Define shifted axes "Y'" and "Y''" 3 or 4 plank widths away from the wall to start installation

### COLLECTION: iD INSPIRATION 55-70

- English Oak Light  
24201 026 - 20 x 122 cm - nb. of boxes: 5
- English Oak Beige  
24201 024 - 20 x 122 cm - nb. of boxes: 2

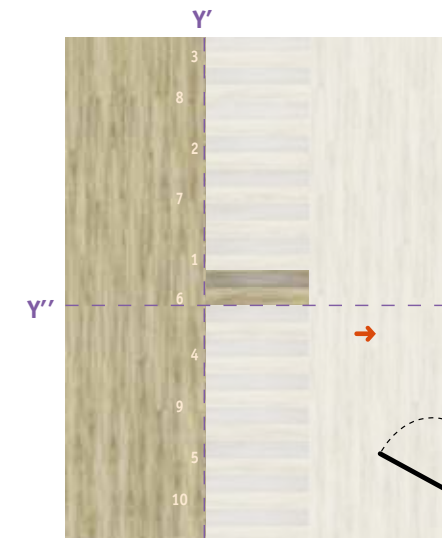

#### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
  - Start from the shifted axes "Y'" and "Y''"
  - Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks (Use the example of the planks "1" to "10" that are to be installed in that order)
  - Use a cork press to ensure bonding
  - Install only full planks

■ Follow this method and install planks backward until you reach the door "↓"

#### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




**TIMELESS**

**MILANO**


Room type:  
Square  
36 m<sup>2</sup>  
Size: 6m x 6m

**STEP-BY-STEP INSTALLATION**

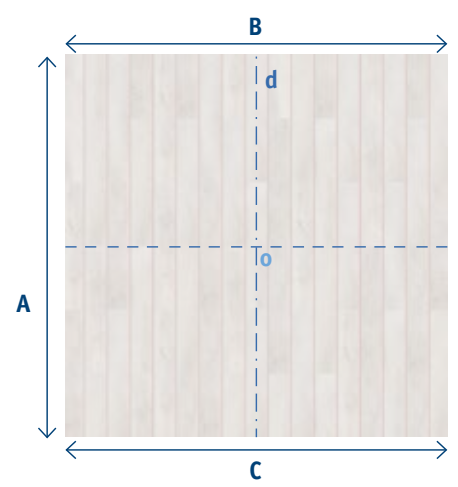

**1. Define axes of the room**

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A


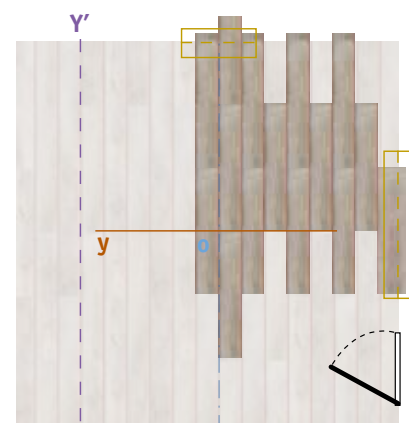


**2. Define the layout**

- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
  - Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
  - Define shifted axis "Y" 3 or 4 plank widths away from the wall to start installation
- Note:** Keep in mind that width of feature strips needs to be taken into account for the layout definition.

**COLLECTION: iD INSPIRATION 55-70**

- Antic Oak Grey  
24203 004 - 25 x 150 cm - nb. of boxes: 12
- Feature Strip Dark Grey  
1421 009 - 50 units of 1 lm/box : 50 lm
- Feature Strip Red  
1421 010 - 50 units of 1 lm/box : 50 lm

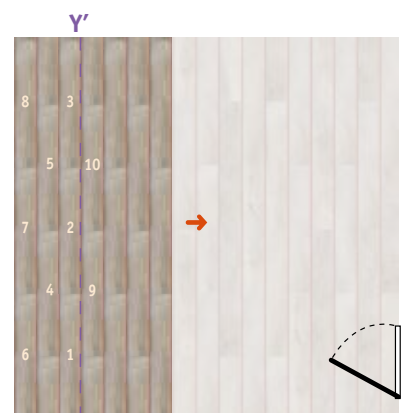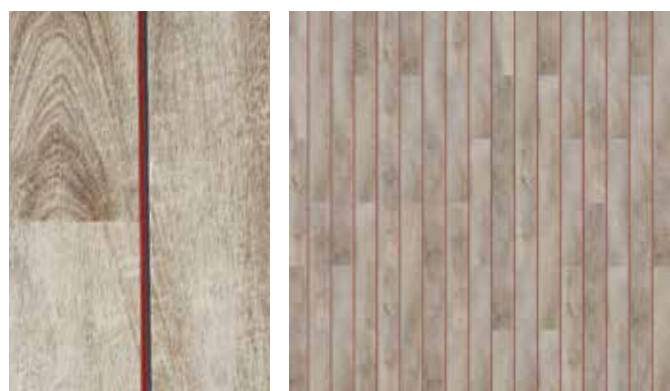

**3. Start gluing**

- Since your layout is planned, you can now define the area for gluing
- Start from the shifted axis "Y"
- Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks (Use the example of the planks "1" to "10" that are to be installed in that order)
- Use a cork press to ensure bonding
- Between each line of planks, add a line of Dark Grey feature strip followed by a line of Red feature strip
- Install only full planks

■ Follow this method and install planks backward until you reach the door "↓"

Tip: install the last rows (up and down) last to walk on LVT where adhesive is already dry.

**Last steps to complete your project**

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: professionals.tarkett.com/content/list-recommended-adhesives). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




# TIMELESS

## HYBRID HERRINGBONE


Room type:  
Rectangular  
56 m<sup>2</sup>  
Size: 7m x 8m

### STEP-BY-STEP INSTALLATION

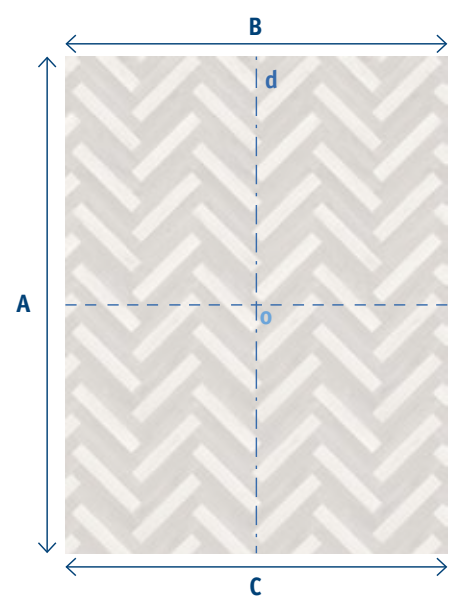


**1. Define axes of the room**

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

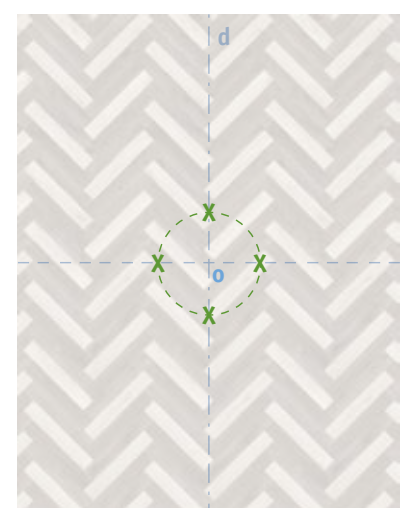


**2. Define diagonal axes**

- Create the diagonals by using a compass with a circle from the central point creating the 4 junctions "x" with axes

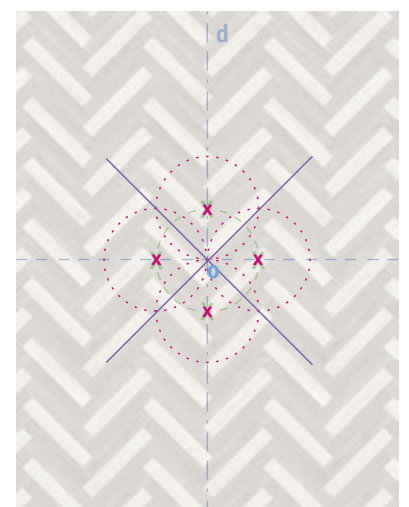

**3. Define diagonal axes**

- Drawing a circle from the central point:
  - create the 4 junctions "x" with axes
  - draw 4 circles from those junctions
- The diagonals cross all intersections of the circles

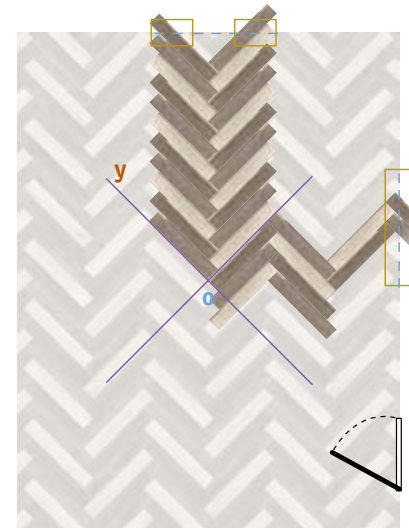

**4. Define the layout**

- From the diagonals, start installation of the first plank
- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

### COLLECTION: iD INSPIRATION 55-70

- Rustic Oak Dark Grey  
24201 122 - 20 x 122 cm - nb. of boxes: 6
- Rustic Oak Medium Grey  
24201 123 - 20 x 122 cm - nb. of boxes: 6
- Rustic Oak Light Grey  
24201 124 - 20 x 122 cm - nb. of boxes: 6



**5. Start gluing**

- Since your layout is planned, you can now define the area for gluing:
  - Shift the starting line to the last full plank, close to the wall on the opposite side of the door
  - Spread adhesive where the first planks will be laid and after maximum 5 minutes of drying time, lay down the planks (Use the example of the planks "1" to "18" that are to be installed in that order)
  - Use a cork press to ensure bonding
  - Install only full planks
- Follow this method and install planks backward until you reach the door "↓"

### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




TIMELESS

DUAL TONES


Room type:  
Rectangular  
40 m<sup>2</sup>  
Size: 5m x 8m

## STEP-BY-STEP INSTALLATION

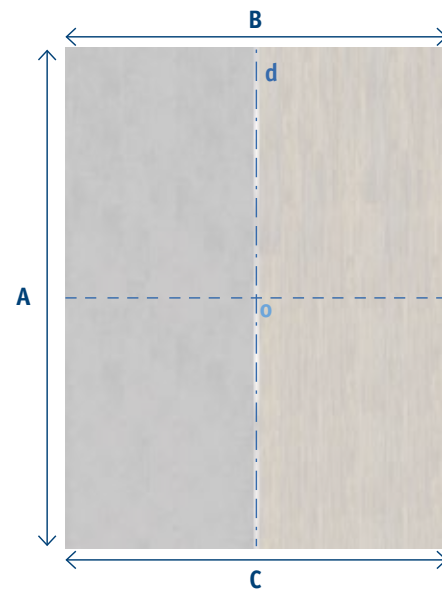

### 1. Define axes of the room


- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

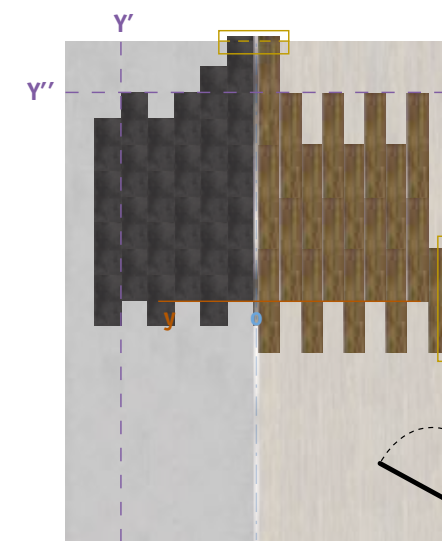



### 2. Define the layout


- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of plank and tile closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Define shifted axis "Y'" and "Y''" 3 or 4 plank widths away from the wall to start installation

## COLLECTION: iD INSPIRATION 55-70

 Vintage Teak Natural  
24202 093 - 25 x 122 cm - nb. of boxes: 6

 Vintage Zinc Black  
24206 094 - 25 x 50 cm - nb. of boxes: 6

 Transition strip Stainless Steel  
1451 022 - 24 x 6 x 2700 mm - 10 units of 2,7 lm/box : 27 lm

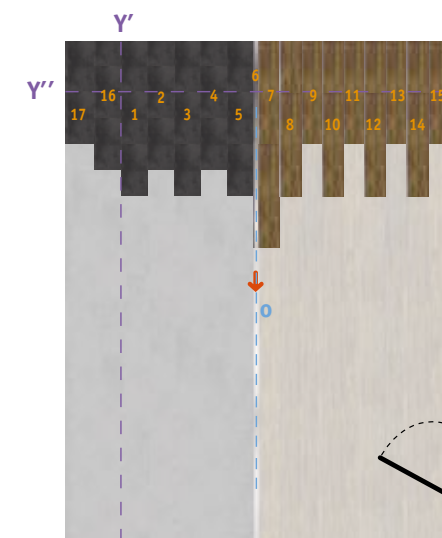

### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
  - Start from the shifted axis "Y'" and "Y''"
  - Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks and tiles (Use the example of the planks and tiles "1" to "17" that are to be installed in that order)
  - Use a cork press to ensure bonding
  - Install only full planks and tiles
- Follow this method and install planks and tiles backward until you reach the door "↓". At the midpoint "o" install the transition strip and then continue your installation with another line of planks.

Tip: use cut off planks from a row to start the next one (if more than 30 cm).

### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks and tiles that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




TIMELESS

VINTAGE WEAVE


Room type:  
Square  
36 m<sup>2</sup>  
Size: 6m x 6m

## STEP-BY-STEP INSTALLATION

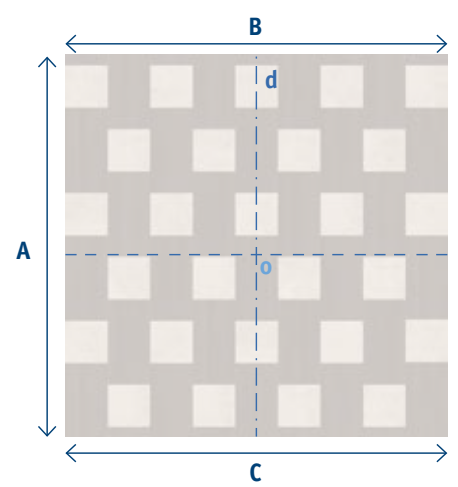

### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

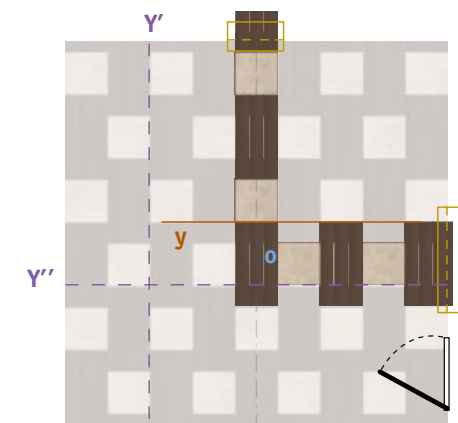


### 2. Define the layout

- Create the layout with a tile covering the plank "y" as reference and centered on the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Define shifted axis "Y'" and "Y'" 3 or 4 plank widths away from the wall to start installation

## COLLECTION: iD INSPIRATION 55-70

- Wenge Natural  
24205 010 - 16.66 x 100 cm - nb. of boxes: 7
- Rustic Slate Beige  
24207 070 - 50 x 50 cm - nb. of boxes: 3

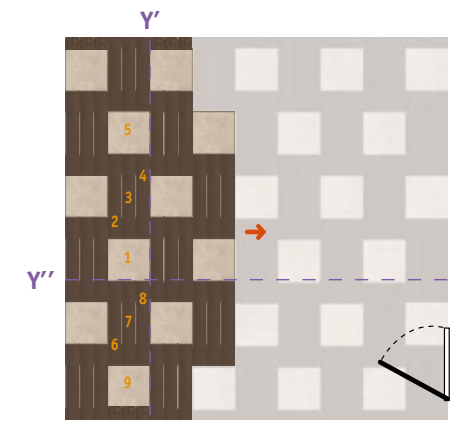

### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
- Start from the shifted axis "Y'" and "Y'"
- Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the planks and tiles (Use the example of the planks and tiles "1" to "9" that are to be installed in that order)
- Use a cork press to ensure bonding
- Install only full planks and tiles

■ Follow this method and install planks and tiles backward until you reach the door "↓"

Tip: use cut off planks from a row to start the next one (if more than 30 cm).

### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process plank after plank. Planks and tiles that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




# HARLEQUIN

## TIMELESS

Room type:  
Rectangular  
14 m<sup>2</sup>  
Size: 2m x 7m

### STEP-BY-STEP INSTALLATION

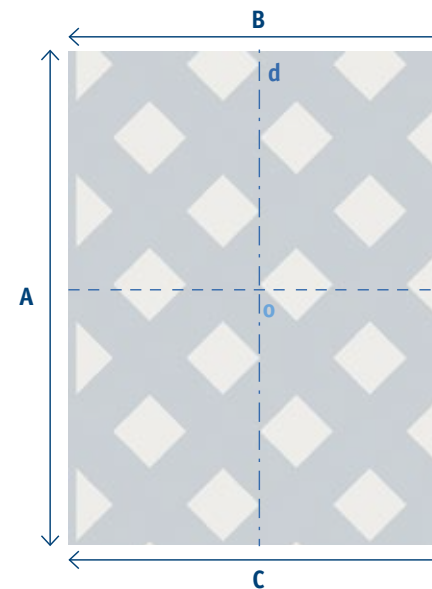


#### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point


- The line "d" goes through the middle of B and C

- The central point "o" is found where line "d" crosses the midpoint of A

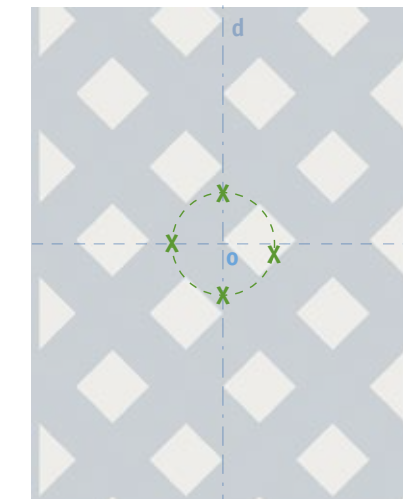

#### 2. Define diagonal axes


- Create the diagonals by using a compass with a circle from the central point creating the 4 junctions "x" with axes

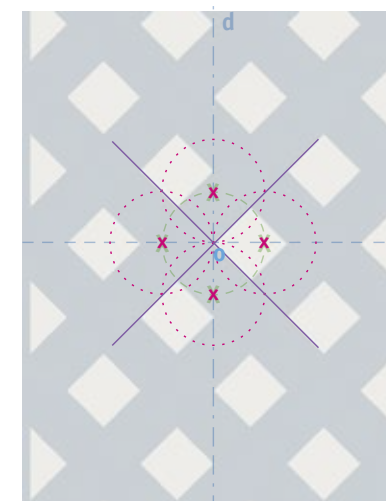

#### 3. Define diagonal axes

- Drawing a circle from the central point:
  - create the 4 junctions "x" with axes
  - draw 4 circles from those junctions

- The diagonals cross all intersections of the circles

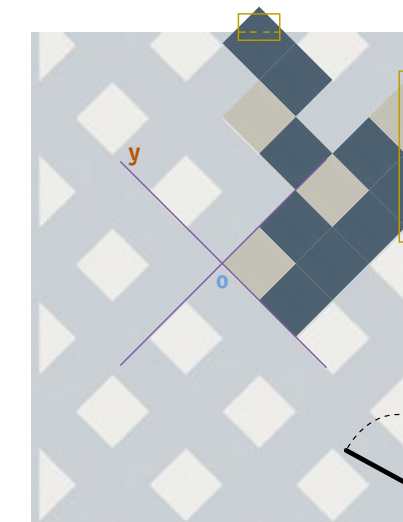

#### 4. Define the layout

- From the diagonals, start installation of the first tile

- Create the layout with a tile covering the line "y" as reference and starting from the point "o"


- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

**Note:** in this installation, remember to take into account the black border when checking dimensions of tiles close to the walls.  
**Tip:** cut tiles in diagonal to prepare borders.

### COLLECTION: iD INSPIRATION 55-70

■ Twine Indigo  
24207 044 - 50 x 50 cm - nb. of boxes: 3

■ Twine Light Grey  
24207 038 - 50 x 50 cm - nb. of box: 2

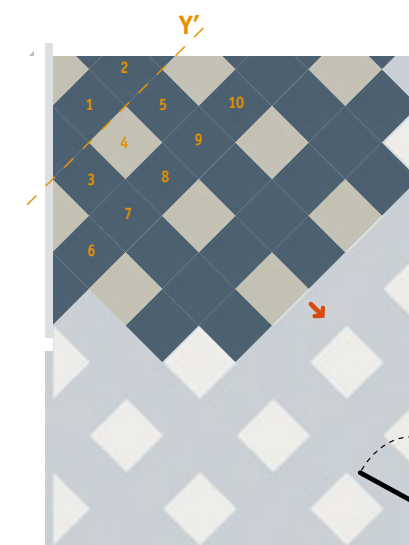

#### 5. Start gluing

- Since your layout is planned, you can now define the area for gluing

- Start from the shifted axis "Y"
- Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the tiles (Use the example of the tiles "1" to "10" that are to be installed in that order)
- Use a cork press to ensure bonding
- Install only full tiles

- Follow this method and install tiles backward until you reach the door "↓"

**Note:** install the border last and scribe it to join perfectly the tiles.

#### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process, tile after tile. Tiles that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.







# TIMELESS

## ART DECO


Room type:  
Rectangular  
48 m<sup>2</sup>  
Size: 6m x 8m

### COLLECTION: iD INSPIRATION 55-70

-  Vintage Zinc Black  
24206 094 - 25 x 50 cm - nb. of boxes: 5
-  Vintage Zinc Rust  
24206 095 - 25 x 50 cm - nb. of boxes: 5
-  Vintage Zinc Silver  
24206 096 - 25 x 50 cm - nb. of boxes: 5




### STEP-BY-STEP INSTALLATION

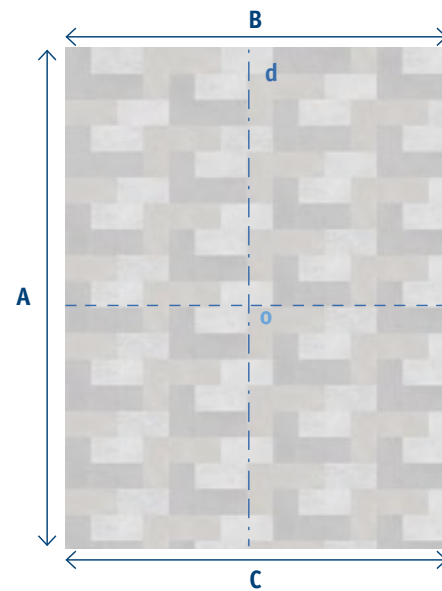

#### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

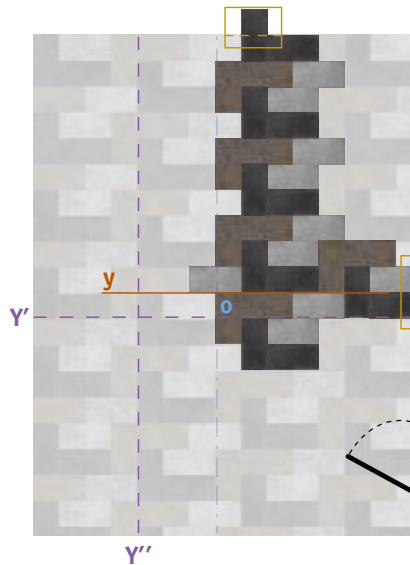

#### 2. Define the layout

- Create the layout with a tile covering the line "y" as reference and starting from the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Define shifted axis "Y'" axe "Y'" 3 or 4 tile widths away from the wall to start installation



#### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
- Start from the shifted axis "Y'" and "Y'"
- Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the tiles (Use the example of the tiles "1" to "13" that are to be installed in that order)
- Use a cork press to ensure bonding
- Install only full tiles
- Follow this method and install tiles backward until you reach the door "↓"

#### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process, tile after tile. Tiles that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




TIMELESS

# MACRO CHECKERBOARD


Room type:  
Square  
64 m<sup>2</sup>  
Size: 8m x 8m

## COLLECTION: iD INSPIRATION 55-70

- Tissé Beige  
24207 082 - 50 x 50 cm - nb. of boxes: 9
- Tissé Black  
24207 083 - 50 x 50 cm - nb. of boxes: 9

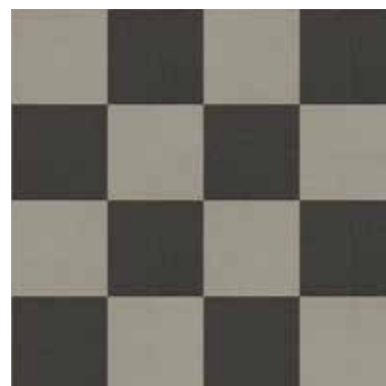


## STEP-BY-STEP INSTALLATION

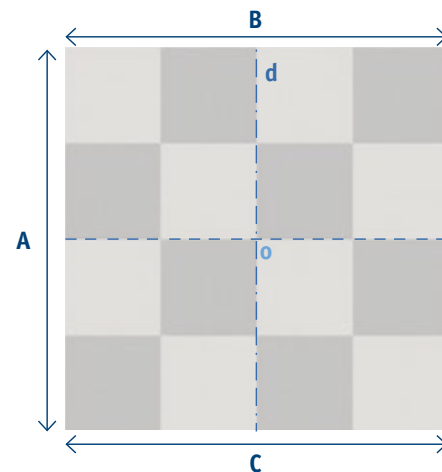

### 1. Define axes of the room


- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

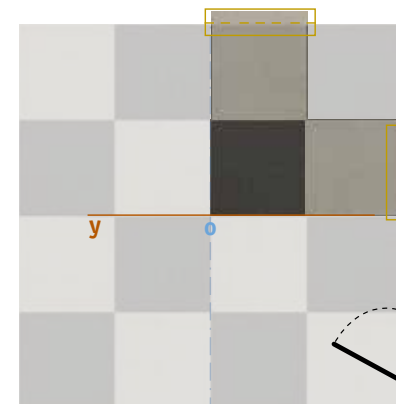

### 2. Define the layout

- Create the layout with a tile covering the line "y" as reference and starting from the point "o"
- Check that width of plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

**Note:** in this installation, remember to take into account the border when checking dimensions of tiles close to the walls.

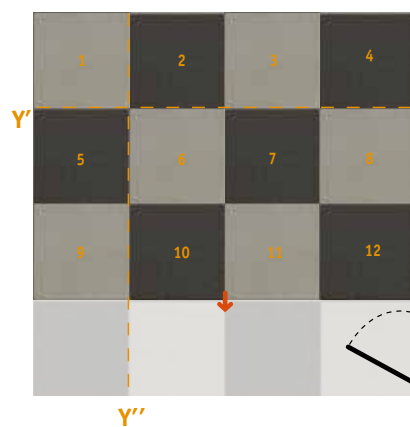

### 3. Start gluing

- Since your layout is planned, you can now define the area for gluing
- Start from the shifted axis "Y'" and "Y'''
- Spread adhesive on a part of the installation and after maximum 5 minutes of drying time, lay down the tiles (Use the example of the group of tiles "1" to "12" that are to be installed in that order)
- Use a cork press to ensure bonding
- Install only full tiles

- Follow this method and install tiles backward until you reach the door "↓"

**Note:** install the border last and scribe it to join perfectly the tiles.

### Last steps to complete your project

As Tarkett recommends specific acrylic adhesive with wet bonding, it will be easier to do the gluing/laying process, tile after tile. Tile that have to be trimmed should be the last ones to be installed. Trimming of edges is done by scribing. Use a heavy roller on the whole surface, in both directions to ensure bonding.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.

click






NEW

# LINEAR MOODBOARD

Room type:  
Square  
100 m<sup>2</sup>  
Size:  
10m x 10m


## STEP-BY-STEP INSTALLATION

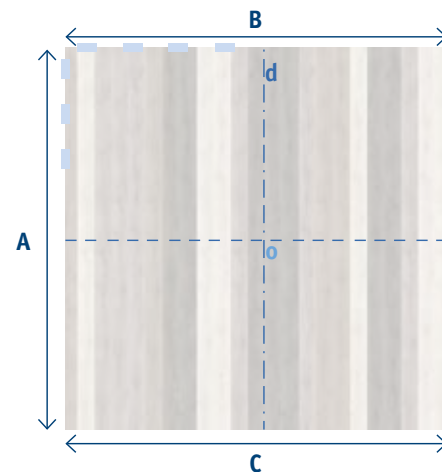

### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

Note: You need to leave a 5 mm expansion gap on outskirts ( )

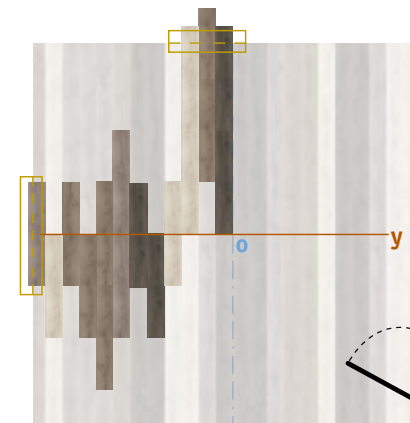


### 2. Define the layout

- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of plank and tile closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result " "

## COLLECTION: iD INSPIRATION CLICK

- Rustic Oak Stone Brown  
24264 121 - 19.05 x 121.10 cm - nb. of boxes: 17
- Rustic Oak Light Grey  
24264 122 - 19.05 x 121.10 cm - nb. of boxes: 17
- Rustic Oak Medium Grey  
24264 123 - 19.05 x 121.10 cm - nb. of boxes: 17
- Rustic Oak Dark Grey  
224264 124 - 19.05 x 121.10 cm - nb. of boxes: 17

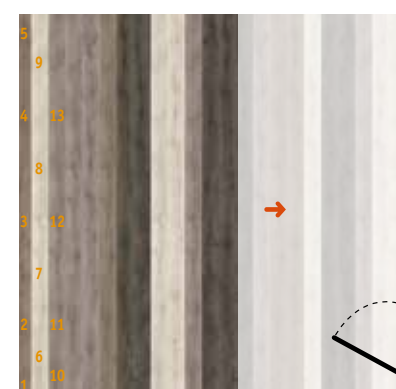

### 3. Install the layout

- Since your layout is planned, you can now start the installation (Use the example of the tiles "1" to "13" that are to be installed in that order)
- When a complete tile or plank cannot be installed, use the scribing method
- Complete all lines of your installation with the scribing method as you install complete and non-complete planks and tiles.
- Follow this method and install planks backward until you reach the door "→"




TIMELESS

DUAL TONES

Room type:  
Square  
30 m<sup>2</sup>  
Size: 6m x 5m


## STEP-BY-STEP INSTALLATION

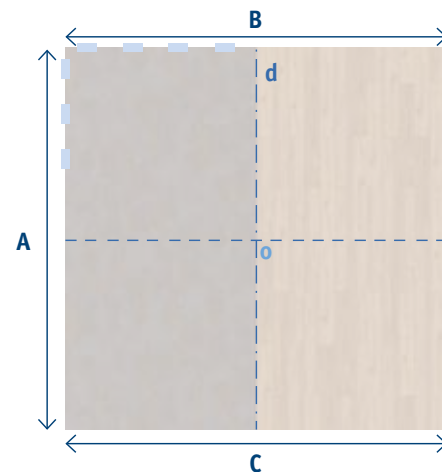

### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

Note: You need to leave a 5 mm expansion gap on outskirts (■)

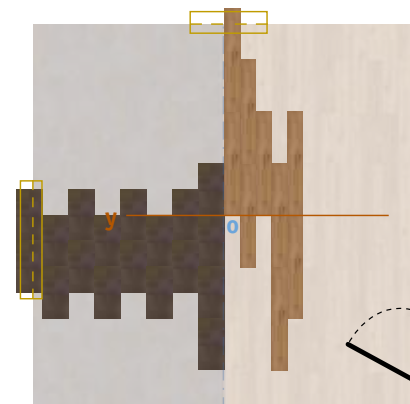


### 2. Define the layout

- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of plank and tile closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"

## COLLECTION: iD ESSENTIAL CLICK

Delicate Oak Natural  
24722 002 - 18.2 x 122 cm - nb. of boxes: 9

Rust Metal Brown  
24723 001 - 31 x 60.3 cm - nb. of boxes: 10

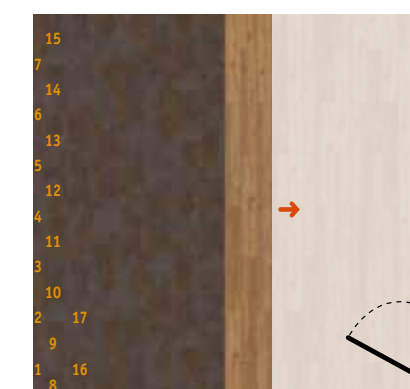

### 3. Install the layout


- Since your layout is planned, you can now start the installation (Use the example of the tiles "1" to "17" that are to be installed in that order)
- When a complete tile or plank cannot be installed, use the scribing method
- Complete all lines of your installation with the scribing method as you install complete and non-complete planks and tiles.
- Follow this method and install planks backward until you reach the door "→"



# FRENCH MARINIÈRE

Room type:  
Square  
25 m<sup>2</sup>  
Size: 5m x 5m


## STEP-BY-STEP INSTALLATION

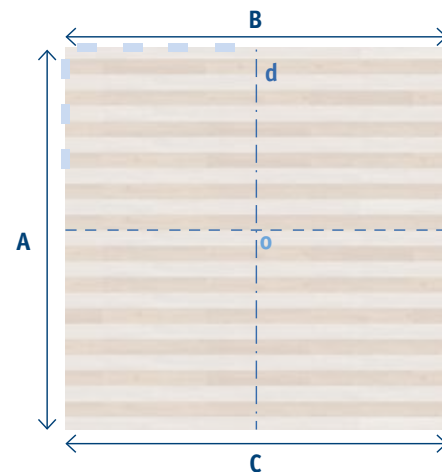

### 1. Define axes of the room

- Measure the size of the room (**A**, **B** and **C**) when the room is square enough to define the axes and centre point
- The line "**d**" goes through the middle of **B** and **C**
- The central point "**o**" is found where line "**d**" crosses the midpoint of **A**

Note: You need to leave a 5 mm expansion gap on outskirts ( — )

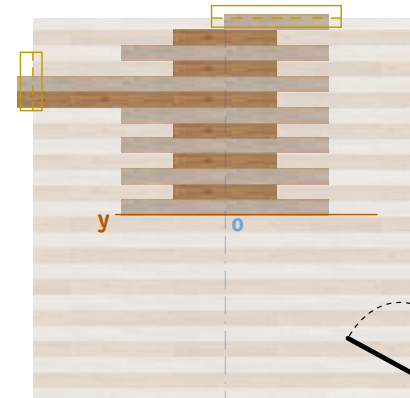


### 2. Define the layout

- Create the layout with a plank covering the line "**y**" as reference and starting from the point "**o**"
- Check that width of plank and tile closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result " — "

## COLLECTION: iD ESSENTIAL CLICK

Limewashed Oak Beige  
24722 000 - 18.3 x 122 cm - nb. of boxes: 7

Delicate Oak Natural  
24722 002 - 18.3 x 122 cm - nb. of boxes: 7

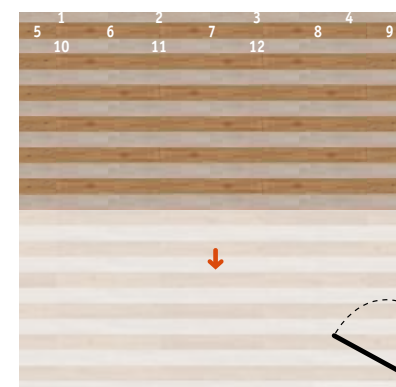

### 3. Install the layout

- Since your layout is planned, you can now start the installation (Use the example of the planks "**1**" to "**12**" that are to be installed in that order)
- When a complete plank cannot be installed, use the scribing method
- Complete all lines of your installation with the scribing method as you install complete and non-complete planks.
- Follow this method and install planks backward until you reach the door "→"




TIMELESS

TWO STEP


Room type:  
Rectangular  
48 m<sup>2</sup>  
Size: 6m x 8m

## STEP-BY-STEP INSTALLATION

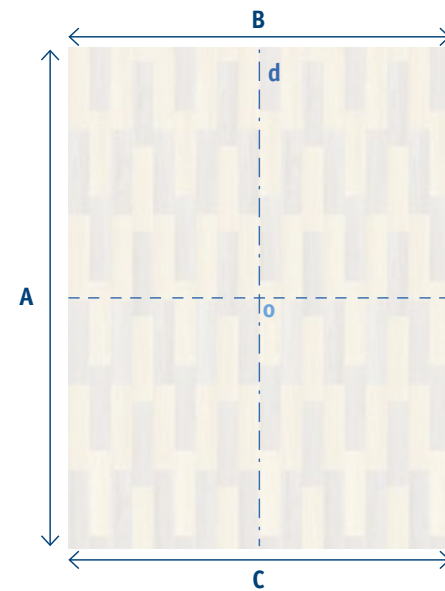

### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

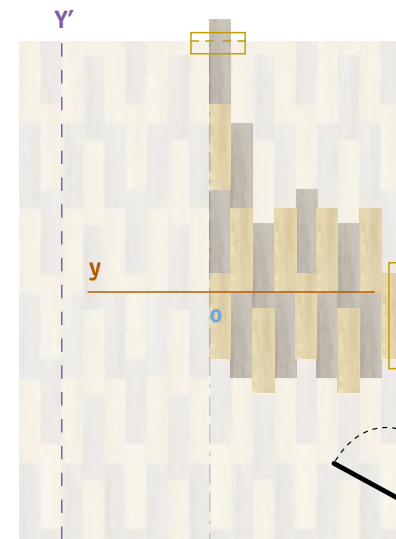


### 2. Define the layout

- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of the plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Define shifted axis "Y" 3 or 4 plank widths away from the wall to start installation

## COLLECTION: iD INSPIRATION CLICK

Patina Ash Beige  
24264 106 - 25 x 100 cm - nb. of boxes: 7

Patina Ash Grey  
24264 108 - 25 x 100 cm - nb. of boxes: 7

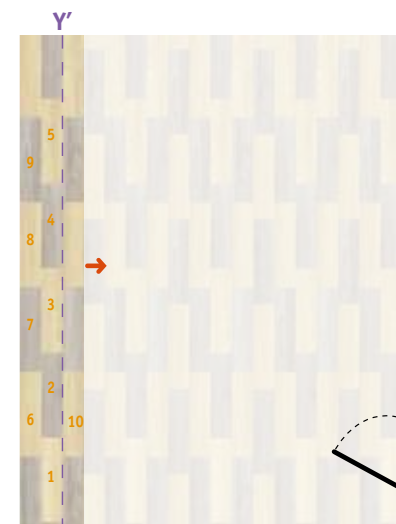

### 3. Install the layout

- Since your layout is planned, you can now start the installation (Use the example of the planks "1" to "10" that are to be installed in that order)
- When a complete plank cannot be installed, use the scribing method
- Complete all lines of your installation with the scribing method as you install complete and non-complete planks.
- Follow this method and install planks backward until you reach the door "→"

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.

┌ loose-lay  
\_








TIMELESS

MIXED PATH


Room type:  
Rectangular  
48 m<sup>2</sup>  
Size: 6m x 8m

## STEP-BY-STEP INSTALLATION

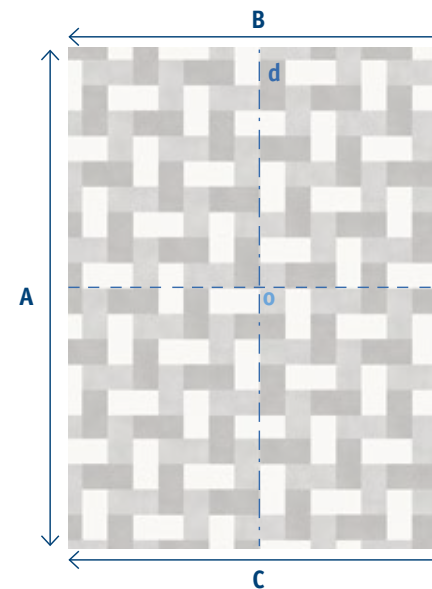

### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

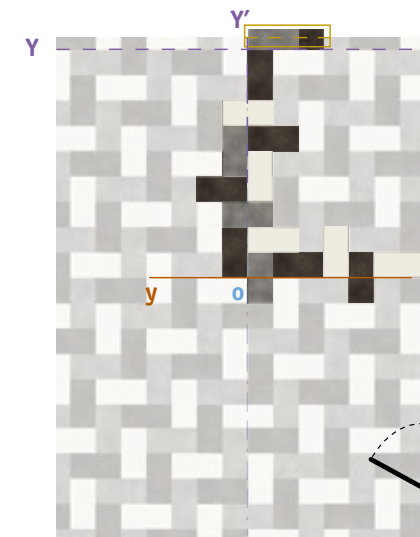


### 2. Define the layout

- Create the layout with a tile covering the line "y" as reference and starting from the point "o"
- Check that width of the plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Installation will start far from the entrance door. Define the starting axes "Y" and "Y'" for the placement of the first cuts

## COLLECTION: iD INSPIRATION LOOSE-LAY

- **Beton White**  
24641 000 - 30.5 x 61 cm - nb. of boxes: 7
- **Beton Grey**  
24641 002 - 30.5 x 61 cm - nb. of boxes: 7
- **Beton Black**  
24641 001 - 30.5 x 61 cm - nb. of boxes: 7

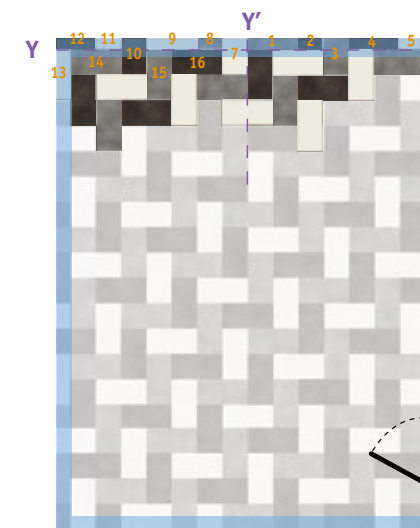

### 3. Start the installation

- As the room is over 16m<sup>2</sup> but less than 64m<sup>2</sup>, Tarkett recommends spreading Tackifier adhesive on the outskirts (10 cm large area)
- Begin from the starting axes ("Y" and "Y'")
- As soon as the first cuts are placed (first row), continue the installation from the opposite wall to the entrance door and from one side to the other (Use the example of the tiles "1" to "16" that are to be installed in that order)
- On the side wall, when a complete tile cannot be installed, use the scribing method to finish the installation of the tile before moving to another tile
- Use a cork press to ensure bonding

Tip: before applying the tackifier, fix the last full tile with a double sided tape adhesive in order to prepare all the cut tiles and draw their position on the floor with a pencil.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.






TIMELESS

# HYBRID HERRINGBONE


Room type:  
Rectangular  
50 m<sup>2</sup>  
Size: 5m x 10m

## COLLECTION: iD INSPIRATION LOOSE-LAY

-  Limed Oak Beige  
24640 000 - 22.9 x 121.9 cm - nb. of boxes: 7
-  Limed Oak Grey  
24640 001 - 22.9 x 121.9 cm - nb. of boxes: 7
-  Limed Oak Brown  
24640 002 - 22.9 x 121.9 cm - nb. of boxes: 7



## STEP-BY-STEP INSTALLATION

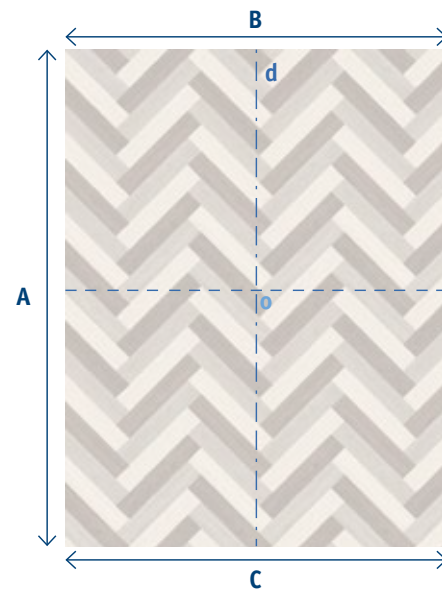


### 1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A



### 2. Define diagonal axes

- Create the diagonals by using a compass with a circle from the central point creating the 4 junctions "x" with axes

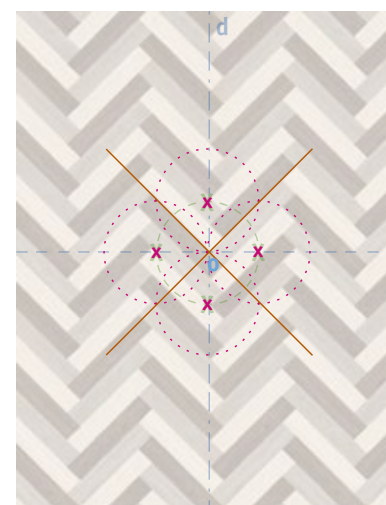


### 3. Define diagonal axes

- Drawing a circle from the central point:
  - create the 4 junctions "x" with axes
  - draw 4 circles from those junctions
- The diagonals cross all intersections of the circles



### 4. Define the layout

- From the diagonals, start installation of the first plank
- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of the plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Installation will start far from the entrance door. Define the starting axes "Y" and "Y'" for the placement of the first cuts

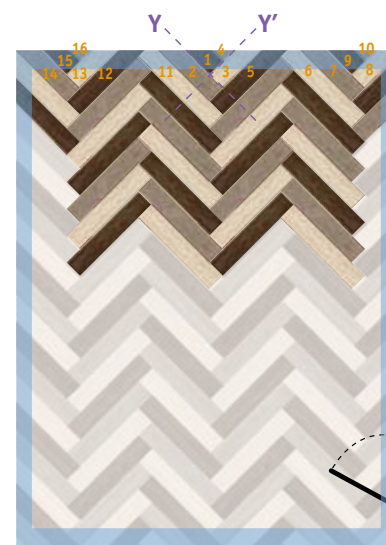

### 5. Start the installation

- As the room is over 16m<sup>2</sup> but less than 64m<sup>2</sup>, Tarkett recommends spreading Tackifier adhesive on the outskirts (10 cm large area)
  - Begin from starting axes ("Y" and "Y'")
  - As soon as the first cuts are placed (first row), continue the installation from the opposite wall to the entrance door and from one side to the other (Use the example of the planks "1" to "16" that are to be installed in that order)
  - On the side wall, when a complete plank cannot be installed, use the scribing method to finish the installation of the plank before moving to another plank
  - Use a cork press to ensure bonding

Tip: before applying the tackifier, fix the last full plank with a double sided tape adhesive in order to prepare all the cut planks and draw their position on the floor with a pencil.

**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](https://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




**TIMELESS**

**SLAM BEAT**


Room type:  
Rectangular  
63 m<sup>2</sup>  
Size: 7m x 9m

**STEP-BY-STEP INSTALLATION**

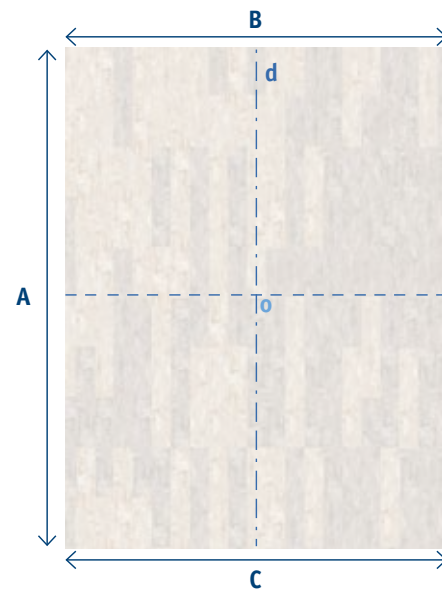


**1. Define axes of the room**

- Measure the size of the room (A, B and C) when the room is rectangle enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

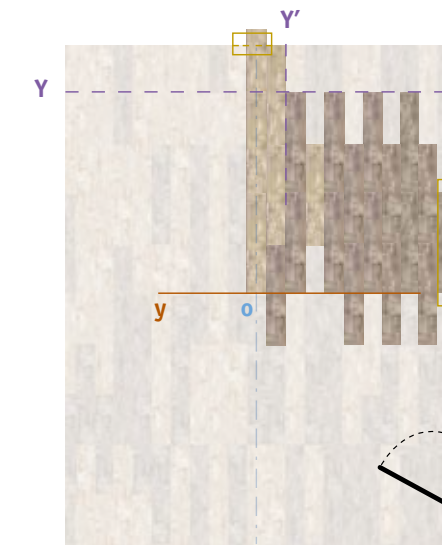

**2. Define the layout**

- Create the layout with a plank covering the line "y" as reference and centered on the point "o"
- Check that width of the plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Installation will start far from the entrance door. Define the starting axes "Y" and "Y'" for the placement of the first cuts

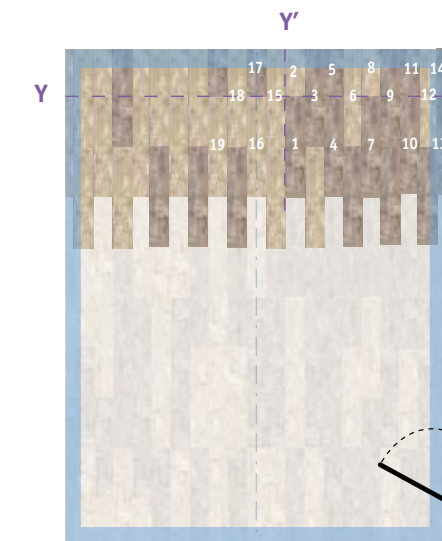

**3. Start the installation**

- As the room is over 16m<sup>2</sup> but less than 64m<sup>2</sup>, Tarkett recommends spreading Tackifier adhesive on the outskirts (10 cm large area)
- Begin from the starting axes ("Y" and "Y'")
- As soon as the first cuts are placed (first row), continue the installation from the opposite wall to the entrance door and from one side to the other (Use the example of the planks "1" to "19" that are to be installed in that order)
- On the side wall, when a complete plank cannot be installed, use the scribing method to finish the installation of the plank before moving to another plank
- Use a cork press to ensure bonding

Tip: before applying the tackifier, fix the last full plank with a double sided tape adhesive in order to prepare all the cut planks and draw their position on the floor with a pencil.

**COLLECTION: iD INSPIRATION LOOSE-LAY**

Beach Wood Beige  
24640 009 - 22.9 x 121.9 cm - nb. of boxes: 13

Beach Wood Grey  
24640 010 - 22.9 x 121.9 cm - nb. of boxes: 13



**Note:** Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: [professionals.tarkett.com/content/list-recommended-adhesives](http://professionals.tarkett.com/content/list-recommended-adhesives)). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.




TIMELESS

TRENDY PALLET


Room type:  
Square  
49 m<sup>2</sup>  
Size: 7m x 7m

STEP-BY-STEP INSTALLATION

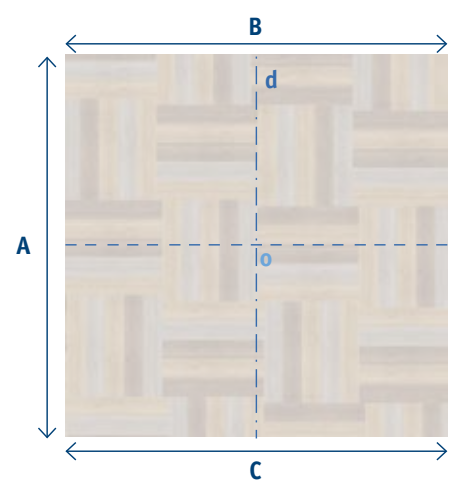

1. Define axes of the room

- Measure the size of the room (A, B and C) when the room is square enough to define the axes and centre point
- The line "d" goes through the middle of B and C
- The central point "o" is found where line "d" crosses the midpoint of A

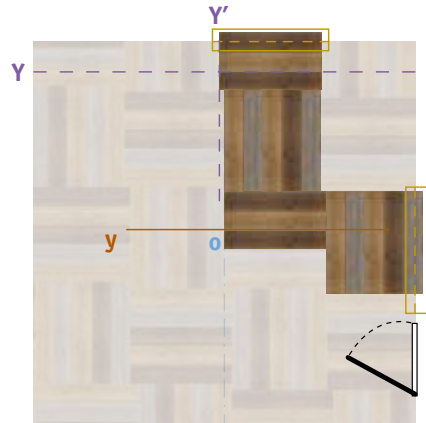


2. Define the layout

- Create the layout with a plank covering the line "y" as reference and starting from the point "o"
- Check that width of the plank closest to the wall is aesthetically big enough. If not, shift the installation to have a satisfying result "□"
- Installation will start far from the entrance door. Define the starting axes "Y" and "Y'" for the placement of the first cuts

COLLECTION: iD INSPIRATION LOOSE-LAY

- Sawn Oak Grey  
24640 016 - 22.9 x 121.9 cm - nb. of boxes: 6
- Sawn Oak Brown  
24640 017 - 22.9 x 121.9 cm - nb. of boxes: 8
- Sawn Dark Brown  
24640 018 - 22.9 x 121.9 cm - nb. of boxes: 6

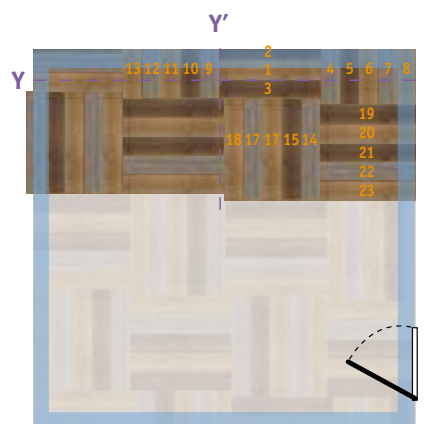

3. Start the installation

- As the room is over 16m<sup>2</sup> but less than 64m<sup>2</sup>, Tarkett recommends spreading Tackifier adhesive on the outskirts (10 cm large area)
- Begin from the starting axes ("Y" and "Y'")
- As soon as the first cuts are placed (first row), continue the installation from the opposite wall to the entrance door and from one side to the other (Use the example of the planks "1" to "23" that are to be installed in that order)
- On the side wall, when a complete plank cannot be installed, use the scribing method to finish the installation of the plank before moving to another plank
- Use a cork press to ensure bonding

Tip: before applying the tackifier, fix the last full plank with a double sided tape adhesive in order to prepare all the cut planks and draw their position on the floor with a pencil.

Note: Tarkett may recommend a selection of manufacturer adhesive, we do not however guarantee the products listed (list available at: professionals.tarkett.com/content/list-recommended-adhesives). Tarkett would not accept any liability for any of these products failing to perform in conjunction with any of their products. It is the responsibility of the adhesive manufacturer and flooring contractor to ensure the product being used is appropriate to use and applied in accordance with the manufacturer recommendations.

# 「installation tips



## INSTALLATION TIPS GLUE-DOWN

### IMPORTANT!

- Make sure all specifications and instructions are followed carefully.
- Contact your Tarkett representative if you are unsure about any part of the installation.
- This information is subject to change due to continuous improvement.
- Use the same shade number for each continuous surface.
- Store the boxes in small neat piles (max. 5 boxes high).
- Let the flooring acclimatise at least 24h before laying at room temperature (minimum 15°C).
- The subfloor must be flat, level, clean, without marks (no felt pen, marker, etc.), sound, dry, solid, hard, smooth and not exposed to moisture. Absorbency must be checked and adjusted to have moderately absorbent subfloor.
- Use only adhesives recommended by Tarkett and developed for LVT installation. Always follow the adhesive manufacturer's instructions and recommendations.
- For specific areas with sunlight exposure (winter garden...), select an adapted adhesive recommended by manufacturers.
- The work must be completed with an inspection: ensure that the newly laid floor is free from adhesive residues.

### SUBFLOOR

The subfloor must be level, flat, clean, free from marks (no felt pen, marker of any type, ballpoint pens, paint, etc., that could cause discoloration due to migration) sound, dry, solid, hard, smooth (the absorbency must be checked) and not exposed to moisture.

The preparation/dryness of the subfloor and installation procedures should all be in accordance with the current relevant standard within the country of use. The dryness of a solid subfloor should be below the maximum moisture level permitted when tested in accordance with that standard.

E.g. in the UK, the relative humidity of concrete surfaces must be below 75%, and less than 2% with the CCM method.

In North America, ASTM F-170 recommends a water-to-cement ratio of 0.40 to 0.45.

Before selecting a smoothing compound, check what type of traffic the floorcovering will be subjected to once installed. Latex smoothing compounds are not suitable for areas that will receive heavy traffic, especially heavy, narrow wheeled traffic (see EN 12529, Castors and wheels). Check levelling compound compatibility, and follow the instructions of the levelling compound manufacturer.

**Note:** exclusion of liability (adhesives, levelling compounds, etc.) Although Tarkett may list a selection of adhesive, levelling compound and surface damp-proof membrane manufacturers and types, we do not guarantee the products listed. The list of products and manufacturers is not guaranteed complete or current.

Tarkett will accept no liability for any of these products failing to perform in conjunction with any of its products. It is the responsibility of the adhesive, levelling compound and surface damp-proof membrane manufacturer and flooring contractor to ensure the products being used are appropriate for use and applied in accordance with the manufacturers' recommendations.

### CONDITIONS REQUIRED FOR INSTALLATION

It is important to store the planks (or tiles) for at least 24 hours before installation at a minimum room temperature of 15°C /see each country regulations. This temperature should be maintained throughout the installation.

The minimum temperature of the subfloor should be 10-12°C and room temperature 15°C. See each country regulations.

The recommended relative humidity inside the room should be 35-65%. See each country regulations.

Planks (or tiles) should be stored flat in their packages, in small neat piles (max. 5 boxes high).

### UNDERFLOOR HEATING

It is imperative that underfloor heating system have been previously commissioned and found to be functioning correctly before installation of the floorcovering.

Ensure that the underfloor heating system is switched-off 48 hours before installation of the floorcovering begins, and remains off for at least 48 hours after installation is completed. While the underfloor heating system is off, an alternative heating source should be provided, if required, to ensure that the installation area is kept at a constant temperature of 18-27°C.

Gradually increase the temperature over a number of days by only a few degrees per day until the desired room temperature is reached.

The temperature should never exceed the floorcovering industry's agreed maximum of 27°C on the underside of the floorcovering (the adhesive line).

### LAYING DIRECTION

Before starting to install tiles/planks, determine the layout you want to achieve, taking into account the shape of the room and the design to be laid.


#### Important!

Before laying the first rows of tiles, check that:  
- the cut tiles closest to the walls are more than 10 cm wide;  
- at doorways and corners, the cut tiles are not less than half a whole tile.

#### ■ Tiles

Tiles are marked on the reverse with arrows. Tiles should be laid in a checkerboard pattern.

Installation should start from the center of the room and finish on the sides (walls).

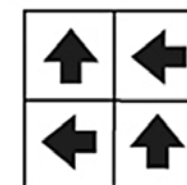

#### ■ Planks

Stagger each row of planks to ensure that the end joints do not coincide with the previous row installed.

For wood patterns, avoid installing planks with the same design next to each other.

### GLUING<sup>1</sup>

Glue with an acrylic adhesive emulsion recommended by Tarkett. Apply about 250 g/m<sup>2</sup> using the recommended trowel (A1 according TKB norm). Always follow the adhesive manufacturer's instructions and respect adhesive drying and working time.

In case of particular conditions, ie. significant temperature variation (veranda, winter garden...) or heavy traffic, bi-component adhesive could be required. Place the tiles or planks tight edge to edge.

After selected area installation, press manually the tiles or planks using a piece of board with a rounded edge. After manual pressing, use a heavy roller in both directions to ensure final bonding.

<sup>1</sup> For more details on gluing, please refer to the adhesives sheet available in each product box.

### AFTER INSTALLATION

#### IMPORTANT!

**Wait 48 to 72 hours before allowing any foot traffic or moving in furniture.**

#### ■ Protection of installation

If building work is carried out after installation, the floor should always be protected by covering it with hardboard or plywood sheeting. Masking tape must not be stuck directly to the floor. Never subject a newly installed floorcovering to heavy wheeled traffic at an early stage, as this will force adhesive from beneath the floorcovering.

#### ■ Initial site clean

An initial site clean is always recommended before the new floorcovering is commissioned.

Residual adhesive should be removed with methylated spirits and a clean cloth.

Lightly soiled floors: vacuum, sweep or damp mop the area to remove loose dirt and building dust. A combined machine is very effective for large areas (combined scrubber/dryer with cylindrical brushes for safety flooring).

## INSTALLATION TIPS CLICK

### TOOLS FOR THE INSTALLATION OF ID INSPIRATION CLICK

- knife with straight blade
- protective gloves
- white-headed rubber mallet
- folding rule/measuring tape
- pencil/T-square
- spacers

### PREPARATION AND IMPORTANT INFORMATION PRIOR TO INSTALLATION

#### ■ Examination of the goods

Check the quality of the goods supplied before proceeding with the preparation work. Claims cannot be made on goods that have been cut to size or laid. The installation must be done using the same production batch in order to guarantee the uniformity of colour and design.

#### ■ Acclimatisation

iD Click products should be acclimatised for at least 24 hours in the rooms where it is to be installed according to the conditions detailed below.

#### ■ Room temperature conditions

iD Click products should be installed at room temperature, between 18°C and 25°C. The temperature of the subfloor on which the product is to be installed must not be less than 15°C.

#### ■ Subfloor condition

Prepare the surface according to the standards in force in your country. The surface must be level, firm and very dry. The maximum flatness tolerance is 3 mm per linear metre. Textile and needle felt floor coverings must be removed.

In principle, it is recommended that all floor coverings are removed. We advise not proceeding with the installation of iD Click products in the event of:

- significant uneven areas (in excess of standards of flatness applied in the countries concerned),
- cracks in the subfloor,
- subfloor insufficiently dry,
- surface insufficiently firm, too porous or too rough,
- surface contaminated, e.g. by oil, wax, varnish or paint residue,
- difference in level between the subfloor and other structural elements,
- unsuitable subfloor temperature (below 15°C),
- room temperatures lower than 18°C or higher than 25°C,
- no heating protocol.

#### ■ Installation underlay

We highly recommend the use of Tarkomfort Premium or Tarkomfort Pro underlay on any kind of subfloor.

This underlay offers the following advantages:

- it evens out minor irregularities of the surface, e.g. when installing on ceramic tiles, wooden floors, etc
- it improves footstep noise and noise transmission levels
- it maximises the non-slip effect during installation
- it increases underfoot comfort
- it makes the installation easier
- it protects against interaction with the existing subfloor.

#### ■ Permitted subfloors:

- laminate/parquet
- even stone floors, marble, ashlar
- ceramic tiles (seam requirements: < 5 mm wide/< 2 mm deep)
- compact PVC coverings
- even floor screeds: new or reworked

The warranty of the product is invalid when unapproved subfloors are used.

### INSTALLATION

#### ■ Installation direction

Using a suitable spacer, create an expansion joint at least 5 mm wide along the entire periphery. TIP: Use flooring off-cuts as spacers. Also maintain a gap of 5 mm from all fixtures in the room, such as pipes, door frames etc. In principle, this expansion joint must not be filled with silicone, electric cables or other items.

#### ■ The use of silicone is permitted in the following exceptional cases:

##### Damp rooms:

Edge joints in damp rooms of max. 10 m<sup>2</sup>, e.g. bathrooms or kitchens, may be made with silicone in order to avoid any infiltration of water through the expansion joint and onto the installed surface. For all larger areas in damp rooms, we recommend starting by applying insulating tape to the area of the joint before filling it with a quantity of silicone and/or using a skirting board with a sealing lip.

##### Door frames:

If the door frames cannot be shortened, we recommend a 3 mm gap for the expansion joint, which can be filled with silicone. If the frames can be shortened, make sure that there is a 5 mm expansion joint in relation to the wall.

#### ■ Installation

Install the first panel with the tongue side facing the wall, then install all the other panels in the same way. Make sure that the ends are placed one on top of the other so that the grooves and the tongues correspond exactly and lock them by tapping lightly with a rubber mallet. To install the next row, place the left-over panel of at least 30 cm in length into the longitudinal groove of the row already installed at an angle of approximately 30° and lower it into the previous row using slight pressure. Take the next panel, place it also at an angle of approximately 30° in the longitudinal direction on the panel of the first row already installed, align it as closely as possible with the end of the panel previously installed and lock it as described above. This method is then used to install all of the other rows. Make sure that the end joints are offset by at least 30 cm in the individual rows in order to achieve the best installation. To install the last row, the distance between the wall and the row installed is measured and transferred to the panel. The last row installed should be as close to half a panel's width as possible. Remember the 5 mm wide expansion joint.

#### ■ Expansion profiles within the area

Rooms with an uninterrupted area of 150 m<sup>2</sup> may benefit from a joint-free installation, taking into account twice the expansion gap (approximately 10 mm). Do not exceed a length of approximately 15 m. Expansion profiles have to be used in rooms that are extremely long and narrow. Room areas interrupted by vertical elements (columns, walls, door frames, etc.) must be divided using expansion joints of at least 5 mm at the same level as these elements. When installing skirting boards, transition profiles or end profiles, the skirting boards or profiles must never be fixed to the floor covering. Contact your Tarkett representative if you would like more information on this.

#### Important information on completing the installation

Remove all of the spacers.

iD Click products must never be fixed to the subfloor, underlay, furniture or other fixtures.

The appropriate use of anti-dirt areas and mats greatly reduces dirt deposits. Please use sliders suitable for hard floors if mobile furniture is used. Please provide office chairs and other wheeled equipment with W type castors.

We recommend the application of a protective coat of TarkoProtect before the finished floor is used.

#### ■ Particularities and exceptional situations

In conservatories or verandas, the use of iD Click products may prove critical because of extreme variations in temperature and is therefore not recommended.

Peripheral joints in wet rooms of maximum 10 m<sup>2</sup>, such as a bathroom or kitchen, may be filled with silicone to prevent the penetration of water under the surface via the expansion joint. For all areas in larger wet rooms, we recommend first applying joint sealing tape to the joint areas and filling them with silicone compound.

Dyed rubber-based wheels and castors (e.g. vehicle tyres, pneumatic tyres) may cause irreversible colour changes in cases of direct interaction and contact with vinyl surfaces.

#### ■ Cleaning and maintenance

Give the floor a final clean after installation. The floor can be maintained by sweeping, vacuuming or mopping. Use a brush and a pH-neutral detergent to remove stubborn dirt. All aggressive and staining substances must be removed from the surface immediately.

### The installation of iD Click products

#### ■ Step 1

**The first row:** Tongue faces the wall. The remaining piece (min. 30 cm) of the first row can be used as the first panel of the second row.




#### ■ Step 2


**The second row:** The tongue side is inserted with an angle of 30° in the groove of the first row.

#### ■ Step 3

**Drop down the plank:** Lay the plank down – ready!

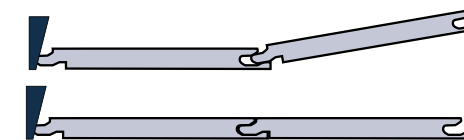

**Face side connection:** Lock the front joints by hitting them lightly with a white rubber hammer – the closed planks should now remain flat.

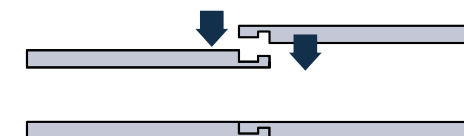

## INSTALLATION TIPS LOOSE-LAY

### IMPORTANT!

- Make sure all specifications and instructions are followed carefully.
- Contact your Tarkett representative if you are unsure about any part of the installation.
- This information is subject to change due to continuous improvement.
- Use the same shade number for each continuous surface.
- Store the boxes in small neat piles (max. 10 boxes high) away from direct sunlight, heaters or air vents.
- Let the flooring acclimatise at least 24h before laying at room temperature (minimum 15°C).
- Do not install iD Inspiration Loose-Lay under severe conditions (less than 10°C, more than 28°C) and maintain this temperature in the room during the life span of the product.
- The subfloor must be flat, level, clean (no grease, solvent or chemicals) and free of dust, without marks (no felt pen, marker, oil, etc.), sound, dry, solid, hard, free of cracks, smooth and not exposed to moisture.
- If the subfloor is not stable due to contaminants like sand and dust, please make it harder by using a primer.
- This product is suitable with underfloor heating and cooling systems.
- The work must be completed with an inspection.

### SUBFLOOR

The subfloor must be level, flat, clean, free from marks (no felt pen, marker of any type, ballpoint pens, paint, etc., that could cause degradation or discoloration due to migration) sound, dry, solid, hard, free of cracks, smooth and not exposed to moisture.

The preparation/dryness of the subfloor and the installation procedures should all be in accordance with the current relevant standard within the country of use. The dryness of a solid subfloor should be below the maximum moisture level permitted when tested in accordance with that standard.

E.g. in the UK, the relative humidity of concrete surfaces must be below 75%, and less than 2% with the CCM method.

In North America, ASTM F-170 recommends a water-to-cement ratio of 0.40 to 0.45.

Before selecting a smoothing compound, check what type of traffic the floorcovering will be subjected to once installed. Latex smoothing compounds are not suitable for areas that will receive heavy traffic, especially heavy, narrow wheeled traffic (see EN 12529, Castors and wheels). Check levelling compound compatibility, and follow the instructions of the levelling compound manufacturer.

**Note:** exclusion of liability (adhesives, levelling compounds, etc.) Although Tarkett may list a selection of adhesive, levelling compound and surface damp-proof membrane manufacturers and types, we do not guarantee the products listed. The list of products and manufacturers is not guaranteed complete or current.

Tarkett will accept no liability for any of these products failing to perform in conjunction with any of its products. It is the responsibility of the adhesive, levelling compound and surface damp-proof membrane manufacturer and flooring contractor to ensure the products being used are appropriate for use and applied in accordance with the manufacturers' recommendations.

### CONDITIONS REQUIRED FOR INSTALLATION

It is important to store the planks (or tiles) for at least 24 hours before installation at a minimum room temperature of 15°C. See each country regulations. This temperature should be maintained throughout the installation.

The minimum temperature of the subfloor should be 10-12°C and room temperature 15°C. See each country regulations.

The recommended relative humidity inside the room should be 35-65%. See each country regulations.

Planks (or tiles) should be stored flat in their packages, in small neat piles (max. 10 boxes high).

### PRODUCT INSTALLATION

Important! Before laying the first rows, check that the cut planks (or tiles) closest to the walls are more than 30 cm long and 10 cm wide, depending on the total layout.

Before starting the installation, check if the wall is straight enough to place planks (or tiles) directly. If not, trace a line a few centimetres away, place your first row and use a scribe. Then, you can place back your first row against the wall.

Cut the last plank (or tile) of a row to the correct length either by a scribe or using another plank (overlapping method).

To install the next row, place the left-over panel of at least 30 cm in length and continue with full planks (or tiles). Make sure that the end joints are offset by at least 30 cm in the individual rows in order to achieve the best installation.


To install the last row, the distance between the wall and the row installed is measured and transferred to the panel using a scribe as for the first line, when the wall is not perfectly straight.

The last row installed should be as close to half a panel's width as possible.


### Remarks

This Loose-lay product is designed to be installed without adhesive. Except for areas that are subject to big temperature fluctuations or very high traffic. In this case, acrylic adhesive should be used.


In case of large areas (over 64 m<sup>2</sup>) or significant traffic, extra strips of adhesive/tackifier should be applied to ensure the stability of the installation.

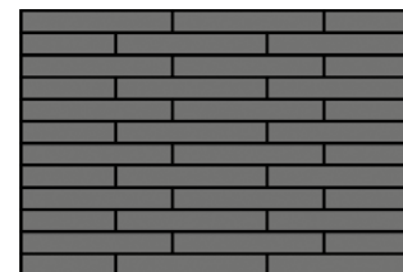

Less than 16m<sup>2</sup>:  
full loose-lay installation –no expansion gap

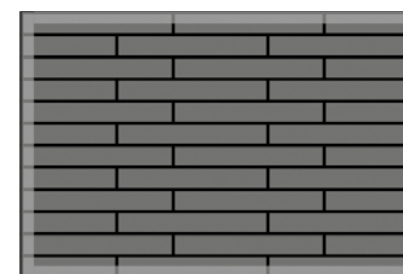

16 m<sup>2</sup> to 64 m<sup>2</sup>:  
10cm tackifier on the outskirts of the room

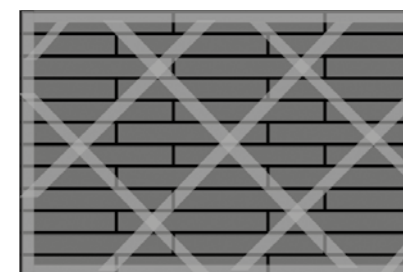

Over 64m<sup>2</sup> :  
create a grid of 4 m by 4 m with the tackifier

### AFTER INSTALLATION

#### IMPORTANT!

**Avoid significant temperature variation, maintaining the temperature between 15°C and 28°C**

**Avoid installation in veranda and winter garden**

#### Protection of installation

If building work is carried out after installation, the floor should always be protected by covering it with hardboard, plywood or TarkoProtect. Masking tape must not be stuck directly to the floor.

#### Initial site clean

An initial site clean is always recommended before the new floorcovering is commissioned.


Lightly soiled floors: vacuum, sweep or damp mop the area to remove loose dirt and building dust. A combined machine is very effective for large areas, using minimum quantity of water.

**Note:** Use matting system to remove all dirt from the bottom of shoes to prevent excessive dirt and moisture being tracked on the floor from entrances. Carpet or mats with rubber backings should not be placed on vinyl tile because of chemical reaction that could cause yellowing.


Avoid exposure to direct sunlight for prolonged period. During peak sunlight hours, the use of blinds is recommended. Prolonged direct sunlight can result in discoloration and excessive temperature might cause planks expansion. Any use of solvent material is strictly prohibited.




## SCRIBING METHOD WIDTHWISE

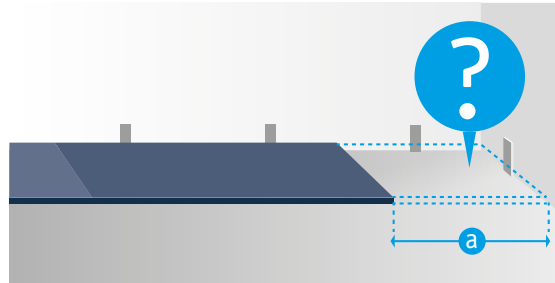


1. When a complete plank cannot be installed

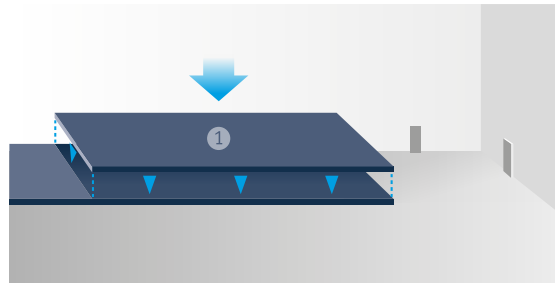

2. Overlap the last plank with a new one

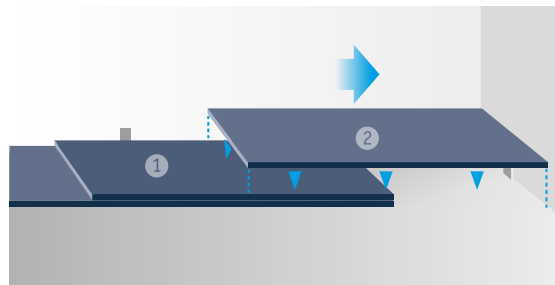


3. Place another one on top, in contact with the wall (keeping the spacer in place)

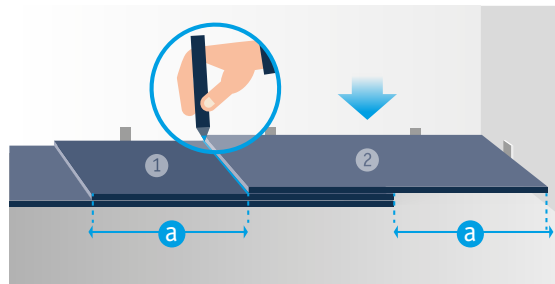


4. Mark the plank with a pen or a blade, cut the plank and place the part "a" in the gap


## SCRIBING METHOD LENGTHWISE

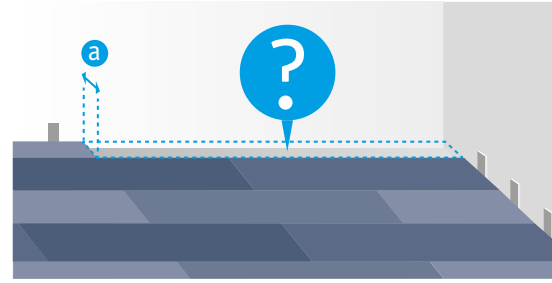


1. When a complete plank cannot be installed

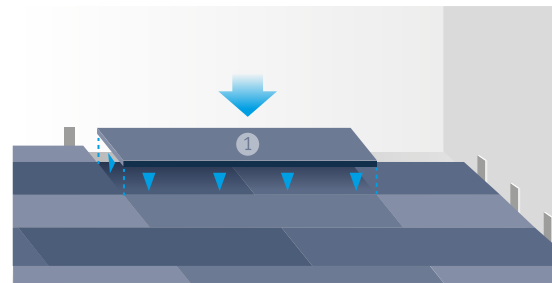

2. Overlap the last plank with a new one

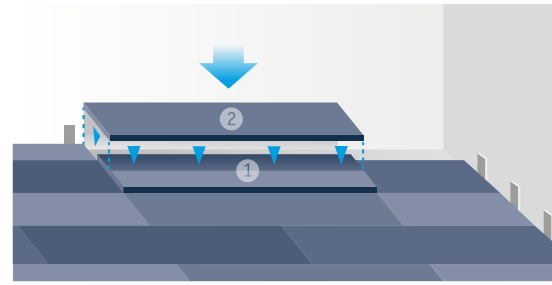


3. Place another one on top, in contact with the wall (keeping the spacer in place)

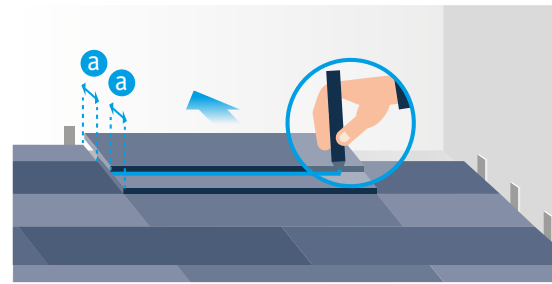


4. Mark the plank with a pen or a blade, cut the plank and place the part "a" in the gap


## SCRIBING METHOD FOR PLANKS IN DIAGONAL

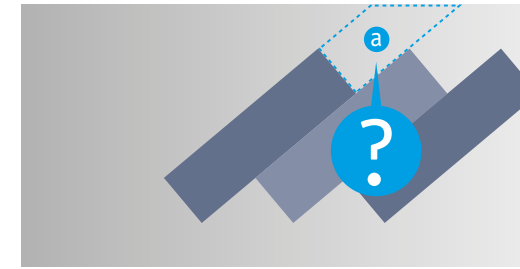


1. When a complete plank cannot be installed

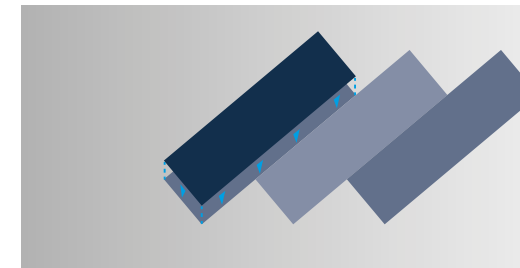

2. Overlap the last plank with a new one

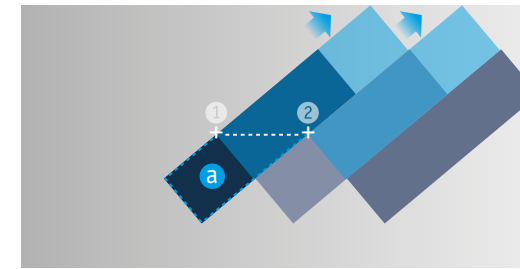


3. Place a plank on top, in contact with the wall to place the first mark (1) and then over the next one, still in contact with the wall to place the second mark (2)

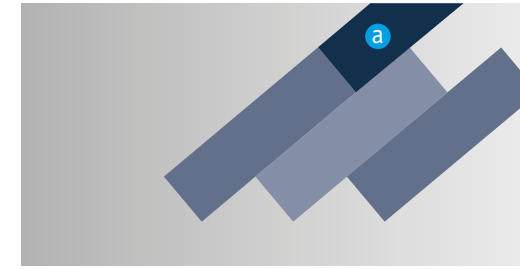


4. Cut along the marks to create the piece that will perfectly fit between the plank and the wall (part "a")


## SCRIBING METHOD FOR TILES IN DIAGONAL

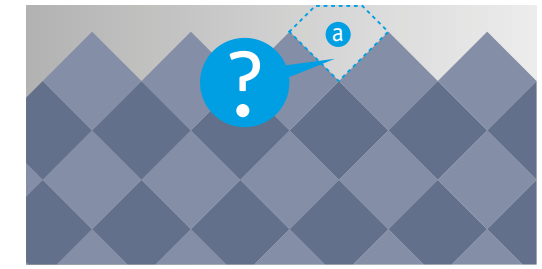


1. When a complete tile cannot be installed

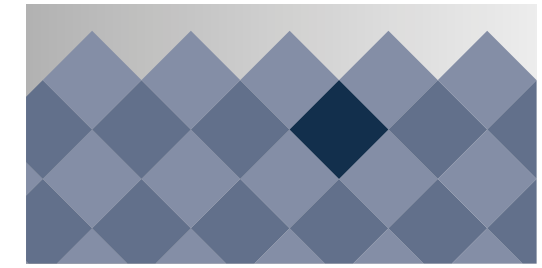

2. Overlap the last tile with a new one

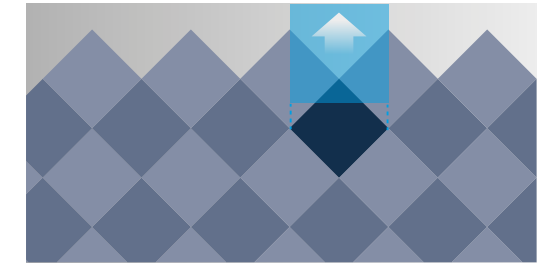

3. Place a template tile (width equal to the diagonal of the installed one) on top, in contact with the wall

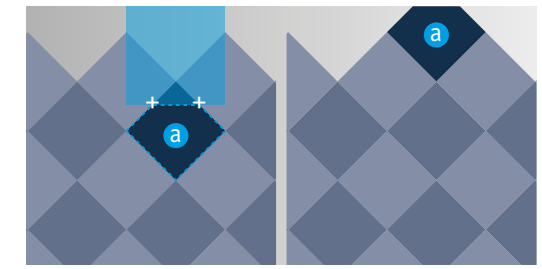

4. Mark the LVT with a pen or a blade, cut the LVT and place it in the gap (part "a")

# FLOOR IS THE NEW PLAYGROUND

[flooristhenewplayground.tarkett.com](http://flooristhenewplayground.tarkett.com)

■ **WESTERN EUROPE:** Austria: Tarkett Holding GmbH, Niederlassung Wien – Tel. +43 1 47 88 062 ■ **Belgium:** Tarkett France Belux – Tel. +32 16 35 98 80 ■ **Denmark:** Tarkett A/S – Tel. +45 43 90 60 11 ■ **Finland:** Tarkett Oy – Tel. +358 9 4257 9000 ■ **France:** Tarkett SAS – Tel. +33 1 41 20 42 49 ■ **Germany:** Tarkett Holding GmbH, Bereich Objekt – Tel. +49 62 33 810 ■ **Greece:** Tarkett Monoprosopi Ltd – Tel. +30 210 6745 340 ■ **Italy:** Tarkett S.p.A. – Tel. +39 0744 7551 ■ **Luxembourg:** Tarkett GDL SA – Tel. +352 949 211 8804 ■ **Netherlands:** Tarkett Holding GmbH, Vestiging Nederland – Tel. +31 76 57 80 760 ■ **Norway:** Tarkett AS – Tel. +47 32 20 92 00 ■ **Portugal:** Tarkett SA – Tel. +351 21 427 64 20 ■ **Spain:** Tarkett Floors S.L – Tel. +34 91 358 00 35 ■ **Sweden:** Tarkett Sverige AB – Tel. +46 771 25 19 00 ■ **Switzerland:** Tarkett Holding GmbH, Bereich Objekt Schweiz – Tel. +41 043 233 79 24 ■ **Turkey:** Tarkett Aspen – Tel. +90 212 213 65 80 ■ **United Kingdom:** Tarkett Ltd – Tel. +44 (0) 1622 854 040 ■ **EASTERN EUROPE:** **Baltic Countries:** Tarkett Baltics: Tel. +370 37 262 220 ■ **Czech Republic:** Tarkett France SAS, org. slozka – Tel. +420-271 001 602 ■ **Hungary:** Tarkett France SAS – Tel. +36 1 437 8150 ■ **Poland:** Tarkett Polska Sp. z o. o. – Tel. +48 22 639 31 68 ■ **Russian Federation:** ZAO Tarkett RUS – Tel. +7 495 775 3737 ■ **Slovakia:** Tarkett France SAS, org.zlozka – Tel. +421 248 291 317 ■ **South East Europe:** Tarkett SEE – Tel. +381 21 7557 649 (44) 569 12 21 ■ **Ukraine:** Tarkett UA – Tel. +38 (0) 44 569 12 21 ■ **ASIA AND OCEANIA:** **Australia:** Tarkett Australia Pty Ltd – Tel. +61 2 88 53 12 00 ■ **China:** Tarkett Floor Covering (Shanghai) Co. Ltd. – Tel. +86 (21) 60 95 68 38 ext 841 ■ **North East Asia:** Tarkett Hong Kong Limited – Tel. +852 2511 8716 ■ **India:** Tarkett France (India Branch) – Tel. +91 11 4352 4073 ■ **South East Asia:** Tarkett Flooring Singapore Pte. Ltd. – Tel. +65 6346 1585 ■ **AFRICA:** **Tarkett International:** Tel. +33 1 41 20 41 01 ■ **MIDDLE EAST:** **Tarkett Middle East:** Tel. +961 1 51 3363/4 ■ **Israel:** Tarkett International: Tel. +33 1 41 20 41 01 ■ **NORTH AMERICA:** **USA:** Tarkett Inc. – Tel. +1 713 869 5811 / Johnsonite – Tel. +1 440 543 8916 ■ **Canada:** Tarkett Inc. – Tel. +1 450 293 173 ■ **LATIN AMERICA:** **Brazil:** Tarkett – Tel. 55 12 3954 7108 ■ **Argentina - Chile - Uruguay:** Tarkett Latam Mercosur – Tel. 54 11 47 08 07 72 / 54 9 11 44 46 88 82 ■ **Colombia - Panama - Bolivia - Ecuador - Paraguay - Peru - Trinidad and Tobago:** Tarkett – Tel. 55 11 9 8410 9310 ■ **Mexico / Central America:** Tarkett Latam Mexico – Tel. 52 735 392-394

2017



THE ULTIMATE  
FLOORING EXPERIENCE