

# FiberFloor® Glueless Installation Instructions

September 22, 2016



1 Undercut door moldings and casings. Sweep or vacuum substrate to remove dirt and debris.




2 Position flooring squarely in room. Allow approximately 3" up the walls to allow for trimming.



3 Using a sharp utility knife, make relief cuts at outside corners.




4 Make relief cuts at inside corners.

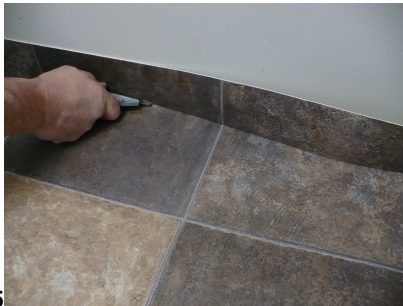

5 Trim flooring along all walls, cabinets, etc.



6 Leave a 1/8"-1/4" gap around all vertical areas (walls, cabinets, pipes, etc.).

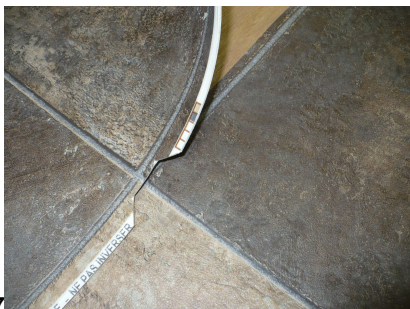

7 When a seam is required, obtain pattern match and overlap factory edges.



8 Place pieces of masking tape over seam edge to prevent movement. Using a sharp utility knife, double-cut through both pieces of flooring.



9 Remove bottom salvage piece.



10 When installing over concrete position Tarkett S860 Seam Tape so it is centered under seam cut.



11 When installing over plywood position Tarkett S870 Floating Seam Tape so it is centered under seam cut.



12 Remove release liner from seam tape.



13 Position seam and roll with hand roller.



14 Seal seam with recommended Tarkett seam sealer. Protect seam from traffic for minimum of 3 hours.



15 Install base board, quarter round or cove base to cover gap at perimeter. Nail into wall, not into the floor.



THE ULTIMATE  
FLOORING EXPERIENCE