

MAINTENANCE INSTRUCTIONS

Page 1

TARKETT - ECLIPSE PREMIUM AND PRIMO PREMIUM SHEET AND TILE

2016

To help protect your floorcovering from varying levels of traffic and also as the first defence against the weather, we strongly recommend that barrier mats be installed at entry points to the building to limit the amount of wet and dry soiling. If maintained correctly, these barrier mats should limit the transfer of foot borne contamination and make the daily cleaning and maintenance programme even easier.

Polish or maintainers should not be applied to the surface of Tarkett Premium products, as the unique PUR factory applied surface treatment removes their necessity.

For commercial to heavy commercial applications mechanical maintenance is considered essential on a regular ongoing basis.


Initial Treatment

1. Allow at least 2 days for tiles and 5 days for sheet from the completion of the installation of the floorcovering, prior to carrying out any wet cleaning.
2. Ensure that all trace of adhesive is removed from the surface of the floorcovering.
3. Sweep floor area with a soft broom or a V Sweep
4. Depending on the level of site soiling after the installation is complete, it may be necessary to scrub the floor clean, prior to adopting the daily maintenance regime. Please find the following options.
 - a) Mop clean using Total Inventive Cleaning Ltd Scrubclean system with Total Inventive Cleaning Ltd SS1 Solution PH neutral detergent (Total Inventive Cleaning Ltd SS3 on heavily soiled areas and TIC Pal-O-Mine Range).
Or
 - b) Scrub the surface of the Safetred using a contra rotating cylindrical machine, rotary scrubber or a scrubber-dryer standard speed machine fitted with a **Red Pad**.

If the flooring is laid in a high risk area, such as some areas in health care applications and if there is a risk of high infection the standard infection control agents such as Chlorclean or Actichlor should be used prior to standard SS1 cleaning fluid.

Routine Maintenance

Non-Mechanical Method

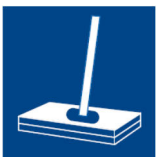

1. Sweep floor area with a soft broom or V sweep.
2. Mop clean using Scrubclean system with SS1 neutral PH detergent, (SS3 on heavily soiled areas and Pal-O-Mine Range).

It is important to ensure that only the smallest amount of moisture is deposited onto the floorcovering when cleaning, so that the floorcovering surface will dry within 15 – 20 seconds.

Mechanical Method



1. Sweep floor area with a soft broom or V sweep.
2. Scrub the surface of the vinyl using a contra rotating cylindrical machine, rotary scrubber or a scrubber-dryer standard speed machine fitted with a **Red Pad**.
3. Scrub floor clean with SS1 neutral PH detergent using a standard-speed rotary machine (150 – 250rpm fitted with a **Red pad** or scrub with a scrubber dryer (combination machine) fitted with a **Red pad**. If the surface is dull, dry burnish with an ultra-high-speed rotary machine (best results 1000rpm) fitted with a **Red pad**. **Dry burnishing** is an efficient method for limiting scuffmarks and also restores the floors surface (if light scratching has become visible). It is best to dry burnish immediately after the floorcovering has been machine scrubbed.

MAINTENANCE INSTRUCTIONS


Page 2

TARKETT - ECLIPSE PREMIUM AND PRIMO PREMIUM SHEET AND TILE

2016

Cleaning & Maintenance of Stairs

Non-Mechanical Method

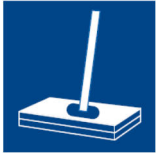

1. Sweep floor area with a soft broom or V sweep.
2. Mop clean using Scrubclean system with SS1 neutral PH detergent, (SS3 on heavily soiled areas and Pal-O-Mine Range).
3. It is important to ensure that only the smallest amount of moisture is deposited onto the floorcovering when cleaning, so that the floorcovering surface will dry within 15 – 20 seconds.