

STATEMENT

Page 1

TARKETT - GRANIT SAFE T AND PRIMO SAFE T FLOORING

2016

To help protect your floorcovering from varying levels of traffic and also as the first defence against the weather, we strongly recommend that barrier mats be installed at entry points to the building to limit the amount of wet and dry soiling. If maintained correctly, these barrier mats should limit the transfer of foot borne contamination and make the daily cleaning and maintenance programme even easier.

Polish or maintainers should never be applied to Safe T, as this would reduce the effectiveness of the surface profile and slip resistance. The unique PUR factory applied surface treatment assists with the ease of maintenance.


Initial Treatment

1. Allow at least 2 days from the completion of the installation of the floorcovering, prior to carrying out any wet cleaning.
2. Ensure that all trace of adhesive is removed from the surface of the floorcovering.
3. Sweep floor area with a soft broom to remove any debris.
4. Depending on the level of site soiling after the installation is complete, it may be necessary to scrub the floor clean, prior to adopting the daily maintenance regime. Please find the following options.
 - a) Mop clean using SYR Scrubclean system with Scrubclean Solution detergent neutral PH detergent *.
 - b) Scrub the surface of the Safe T using a contra rotating cylindrical machine, rotary scrubber or a scrubber-dryer standard speed machine fitted with a medium brush.
 - c) Rinse area clean with hot water (if required).

If the flooring is laid in high risk area, such as some areas in health care applications please substitute the standard Scrubclean solution with Scrubclean Antibacterial (SS2), however if there is a risk of high infection the standard infection control agent such as Chlorclean or Actichlor should be used prior to standard cleaning.

Routine Maintenance

Non-Mechanical Method

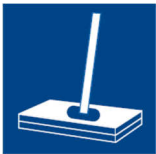

1. Sweep floor area with a soft broom to remove any debris.
2. Mop clean using SYR Scrubclean system with Scrubclean Solution neutral PH detergent *. (SYR SS3 *, should be used on areas that are heavily soiled or greasy)
3. Rinse area clean with hot water and allow to dry completely (if required).

Mechanical Method



1. Sweep floor area with soft broom to remove any debris.
2. Spray apply a solution of SYR SS1 *, diluted as per the manufactures recommendation. A pump-up spray will allow for even distribution and economy of the cleaning solution (SYR SS3 *, should be used on areas that are heavily soiled or are greasy. Leave to stand for 5-10 minutes).
3. Scrub the surface of the Safe T using a contra rotating cylindrical machine, rotary scrubber or a scrubber-dryer standard speed machine fitted with a medium brush.
4. Rinse area clean with hot water and allow to dry completely (if required).

Lime scale may form occasionally in wet areas. These deposits can be easily removed by using an acidic cleaner (pH 2 – 4). Rinse thoroughly after use with clean water.

STATEMENT

Page 2

TARKETT - GRANIT SAFE T AND PRIMO SAFE T FLOORING

2016




Existing cleaning products and methods are no longer fit for purpose. With this new integrating family of products SYR Tic will correct long standing faults related to safety and cleaning. Quality training will be simplified and lead to consistency which in turn will produce huge levels of cost reduction and customer satisfaction.



The Scrubclean® System has unique features such as:

- Cleans floors and other surfaces as often as required with a microfibre mop-head that is laundered clean every time.
- Launders mop-heads during work procedure.
- Cuts traditional detergent use by 60%.
- Water inside the bucket remains cleaner due to the unique chemical introduced into the system.
- Dry, safe floors.
- Many other features can be shown during a demonstration which would illustrate the unique advantages associated with the Scrubclean® System.



The Floor Sponge



Cove Cleaner



Grout Cleaner

The Water Extractor



The Edging Tool



The all square cleaning tool



The all round cleaning tool



- Scrubclean Solution (SS1): Best for general purpose areas. Using this chemical in conjunction with the systems that SYR Tic have created you will get the best possible outcomes when cleaning your surfaces.
- Scrubclean Antibacterial (SS2): Best for high risk areas such as where bacteria can grow. Using this chemical in conjunction with the systems that SYR Tic have created you will get the best possible outcomes when cleaning your surfaces.
- Scrubclean Solution Heavy Duty (SS3): Best used for heavily soiled and greasy areas. (After clearance from Tic Taskforce supervision).



The Fast Mop™ and The Dual Mop™ gives a whole new meaning to sweeping and mopping. Where areas are only lightly soiled but in need of good thorough dust control. THESE MOPS ARE IDEAL. Once it has been established that an area in a building only needs light maintenance treatment then that is what it should get. A great deal of money can be saved by applying Light & Easy cleaning techniques to certain areas where most others call for heavy duty procedures.

The Dual Mop™ & Fast Mop™ work by using the handle of the mop as a cleaning solution reservoir. A thumb operated button on top of the handle pumps solution forwards out of three jets placed just above the pad holder so that the pad can utilise the moisture to clean. The pad uses Velcro to attach to the holder. The reservoir is replenished via the removable ball end at the top of the handle by simply unscrewing.

Contact Us | Email: safefloors@syrcline.com Tel: +44(0)1384 421215 Web: www.syrcline.com